


# INSTRUCTION MANUAL

AUS

Hobs • Cookers

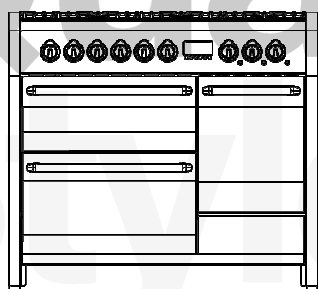

**steel**  
stile in cucina



 
*Thank you for choosing our product. From now on, cooking will always be pleasantly creative with your new cooker.*

*We recommend carefully reading all the instructions in this manual, which includes detailed information about the most suitable conditions for using the cooker correctly and safely. These instructions also help you to become familiar with each component. Useful advice is given for using recipients, utensils, positions of guides and control settings.*

*The correct cleaning operations contained in this manual allow you to maintain the cooker's performance unchanged over time.*

*The individual sections are set out in order to allow you to become familiar with all the functions in the cooker. The text is easy to comprehend and is accompanied with detailed images and simple pictograms.*

*Reading this manual thoroughly will provide you with the answer to any question that may arise regarding the correct use of your new cooker.*



**INSTRUCTIONS FOR THE INSTALLER:** for the **qualified technician** who is in charge of adequately checking the gas system, installing, commissioning and testing the appliance.



**INSTRUCTIONS FOR THE USER:** include suggestions, the description of the controls and the correct cleaning and maintenance operations for the appliance.

<b>1. General information</b>	<b>5</b>
1.1 Technical service	5
<b>2. Warnings for safety and use</b>	<b>6</b>
<b>3. Installation</b>	<b>8</b>
3.1 General warnings	10
3.2 Replacing the adjustable feet	10
3.3 Fitting the front moulding	11
3.4 Fitting the front profile	12
3.5 Fitting the splash guard (optional)	12
3.6 Fitting the telescopic guides (optional)	13
3.7 Electric connection	14
3.8 Electric power table	18
3.9 Ventilation in rooms with gas appliances	19
3.10 Gas connection	19
3.11 Gas adjustments	21
3.12 Connecting to LPG	21
<b>4. Final operations</b>	<b>26</b>
4.1 Stability chain	26
4.2 Levelling the cooker to the floor	26
4.3 Adjustment of the drawer height	26
<b>5. Description of controls</b>	<b>27</b>
5.1 The front panel	27
<b>6. Using the cooking hob</b>	<b>38</b>
6.1 Switching on the burners	38
6.2 Switching off the burners	38
6.3 Abnormal Operation	38
<b>7. Using the fry-top / steak grill</b>	<b>39</b>
7.1 Before switching on the fry-top / steak grill	39
7.2 Switching on	39
7.3 Energy regulator table	39
7.4 Switching off	39
<b>8. Using the volcanic rock grill</b>	<b>40</b>
8.1 Before switching on the grill	40
8.2 Switching on	40
8.3 Energy regulator table	41
8.4 Switching off	41
<b>9. Using the vitroceramic hob</b>	<b>42</b>
9.1 General warnings	42
9.2 Switching on	42
9.3 Switching off	42
<b>10. Using the induction hob</b>	<b>43</b>
10.1 General warnings	43
10.2 Automatic radiant power distribution	44
10.3 Energy regulator table	46
10.4 Switching on the induction hob for the first time	46
10.5 Pan recognition	47
10.6 Switching on a radiant element	48
10.7 Automatic switch-off	51
10.8 Switching off manually	51
10.9 Child safety	51
10.10 In the event of faults and failures	52

---

<b>11. Using the ovens</b>	<b>53</b>
11.1 General warnings	53
11.2 Drawer and storage compartment	53
11.3 Risk of condensation	54
11.4 Using the electric multifunction oven	54
11.5 Using the multifunction and combination steam oven	56
11.6 Using the auxiliary oven with natural convection	59
11.7 Using the convection electric oven	60
11.8 Using the grill oven with natural convection	61
<b>12. Cooking suggestions</b>	<b>62</b>
12.1 Suggestions for using the hob burners correctly	62
12.2 Suggestions for using the fry-top / steak grill correctly	62
12.3 Suggestions for using the volcanic rock grill correctly	62
12.4 Suggestions for using the vitroceramic hob correctly	62
12.5 Suggestions for using the induction hob correctly	63
12.6 Suggestions for using the oven correctly	63
<b>13. Cleaning and maintenance</b>	<b>68</b>
13.1 Maintenance Schedule	68
13.2 Cleaning the stainless steel surfaces	68
13.3 Cleaning the enamelled surfaces	68
13.4 Cleaning the polished surfaces	68
13.5 Cleaning the wooden surfaces, accessories and parts	68
13.6 Cleaning the knobs and the control panel	68
13.7 Cleaning the grids and burners	69
13.8 Cleaning the igniter plugs and thermocouples	69
13.9 Cleaning the fry-top / steak grill	69
13.10 Cleaning the volcanic rock grill	70
13.11 Cleaning the vitroceramic hob	71
13.12 Cleaning the induction hob	71
13.13 Cleaning the oven	72
<b>14. Special maintenance</b>	<b>73</b>
14.1 Removing the oven door	73
14.2 Removing the side rack-holder frames	74
14.3 Removing and cleaning the inside oven fan	75
14.4 Replacing the oven's light bulb	75
14.5 Cleaning the water tank	76


*This user's manual is an integral part of the product purchased. The user must conserve the manual correctly so that it is always available for consultation during the use and maintenance of the product. Keep this user's manual for future reference. If the product is resold, the manual must be transferred to any subsequent owner or user of the product.*

*The manufacturer is not liable for any inaccuracies in this booklet resulting from printing or transcription errors. The manufacturer reserves the right to modify its products as it considers necessary or in the interests of the user, without compromising their essential safety and operating characteristics.*


## CLASSES OF APPLIANCES

The cooking appliances described in this operating manual belong to the following installation classes:

- **Class 1: non-flush-mounted** cooking appliance;

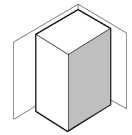

- **Class 2 – subclass 1:** cooking appliance **flush-mounted between two units**, made up of a single unit, but which can also be installed so that the side walls are accessible.

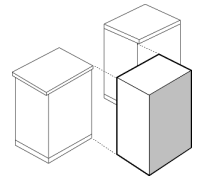


## 1. General information

### 1.1 Technical service



*Before leaving the factory, this appliance has been tested and set up by qualified, specialist personnel, so as to guarantee the best operating results. Each repair or adjustment that may subsequently be necessary must be carried out with the utmost care and attention. We therefore recommend always contacting the Dealer where the appliance was purchased or your nearest Service Centre, specifying the type of problem and the appliance model.*
 
## 2. Warnings for safety and use



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE. IT SHOULD BE KEPT IN GOOD CONDITION AND CLOSE TO THE APPLIANCE FOR THE WHOLE LIFECYCLE OF THE COOKER. WE RECOMMEND READING THIS MANUAL AND ALL THE INDICATIONS IT INCLUDES VERY CAREFULLY BEFORE USING THE COOKER. IN CASE AN ADDITIONAL JETS KIT IS GIVEN AS ACCESSORY TO THE COOKER, WE RECOMMEND KEEPING AND PRESERVING IT.

**THE INSTALLATION MUST BE CARRIED OUT BY AUTHORISED PERSON AND IN COMPLIANCE WITH CURRENT REGULATIONS IN FORCE.** THIS APPLIANCE IS ENVISAGED FOR DOMESTIC USE AND CONFORMS TO THE **AUSTRALIAN STANDARDS** CURRENTLY IN FORCE.

**USE IN A PROFESSIONAL SETTING AND INSTALLATION WITHIN A BUSINESS SUCH AS RESTAURANT, BAR, COMPANY CANTEEN OR ANY OTHER USE OTHER THAN THAT SPECIFIED HERE WILL IMMEDIATELY VOID THE WARRANTY.**

THE APPLIANCE IS BUILT FOR CARRYING OUT THE FOLLOWING FUNCTION: **COOKING AND HEATING FOOD**; ANY OTHER USE IS TO BE CONSIDERED IMPROPER. **THE MANUFACTURER DECLINES ANY RESPONSIBILITY SHOULD THE APPLIANCE BE USED FOR PURPOSES OTHER THAN THOSE INDICATED.**

AT THE MOMENT OF PURCHASE, THE USER ASSUMES DIRECT RESPONSIBILITY FOR THE PRODUCT AND MUST THEREFORE MAKE SURE THAT, WITH NORMAL USE, NO INSTABILITY, DEFORMATION, BREAKAGE OR WEAR OCCURS OVER TIME THAT WOULD REDUCE PRODUCT SAFETY.

THIS PRODUCT IS DESIGNED AND MANUFACTURED TO OPERATE SAFELY AND DOES NOT POSE ANY DANGERS TO PEOPLE, ANIMALS, AND OBJECTS.

DO NOT MODIFY THIS APPLIANCE.



DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.

 
THIS APPLIANCE SHALL NOT BE USED AS A SPACE HEATER.

NOT FOR USE IN MARINE CRAFT, CARAVANS OR MOBILE HOMES UNLESS EACH BURNER IS FITTED WITH A FLAME SAFEGUARD.



ANY TRANSIT PROTECTION MUST BE REMOVED BEFORE USE.

DO NOT LEAVE ANY PIECES OF THE PACKING UNATTENDED IN THE HOME. SEPARATE THE VARIOUS PACKING MATERIALS AND DELIVER THEM TO THE NEAREST RECYCLING CENTRE.



THE EARTH CONNECTION IS OBLIGATORY CONFORMING TO THE MODALITIES ENVISAGED BY THE SAFETY STANDARDS OF THE ELECTRICAL WIRING SYSTEM.



SHOULD THE GAS TAPS BE DIFFICULT TO ROTATE, LUBRICATE THEM USING A SPECIFIC PRODUCT FOR HIGH TEMPERATURES. **CONTACT THE TECHNICAL SERVICE FOR THIS OPERATION.**



IMMEDIATELY AFTER INSTALLATION, TEST THE APPLIANCE BRIEFLY BY FOLLOWING THE INSTRUCTIONS SHOWN BELOW. IN THE EVENT OF A MALFUNCTION, DISCONNECT THE APPLIANCE FROM THE MAINS AND CONTACT YOUR NEAREST TECHNICAL SERVICE CENTRE.

**DO NOT ATTEMPT TO REPAIR THE APPLIANCE.**



USING A GAS COOKING APPLIANCE PRODUCES HEAT AND HUMIDITY IN THE ROOM WHERE IT IS INSTALLED. ENSURE GOOD ROOM VENTILATION: KEEP NATURAL VENTILATION GRILLES OPEN OR INSTALL A MECHANICAL VENTILATION DEVICE (DUCTED EXTRACTION HOOD). INTENSIVE AND PROLONGED APPLIANCE USE MAY REQUIRE SUPPLEMENTARY VENTILATION, FOR EXAMPLE, OPENING A WINDOW, MORE EFFECTIVE VENTILATION, OR INCREASING THE EXTRACTION HOOD POWER, IF INSTALLED.




EACH TIME YOU FINISH USING THE COOKING HOB, ALWAYS CHECK THAT THE CONTROL KNOBS ARE IN "ZERO" POSITION (OFF).




**NEVER PUT INFLAMMABLE OBJECTS INTO THE OVEN:** SHOULD IT BE ACCIDENTALLY SWITCHED ON, A FIRE MAY BREAK OUT. **IN THE EVENT OF A FIRE: CLOSE THE MAIN GAS SUPPLY AND CUT OFF THE ELECTRIC CURRENT.** DO NOT THROW WATER ON BURNING OR FRYING OIL. DO NOT STORE INFLAMMABLE OBJECTS OR AEROSOL CANS NEAR THE APPLIANCE AND DO NOT SPRAY NEAR THE BURNERS WHEN SWITCHED ON. DO NOT WEAR BAGGY CLOTHES OR ACCESSORIES THAT ARE NOT CLOSE TO THE BODY WHEN THE BURNERS ARE SWITCHED ON: SERIOUS INJURIES CAN BE CAUSED BY BURNING FABRIC. DO NOT USE OR STORE FLAMMABLE MATERIALS IN THE APPLIANCE STORAGE DRAWER OR NEAR THIS APPLIANCE.



**DO NOT REST SAUCEPANS** THAT DO NOT HAVE A PERFECTLY SMOOTH, EVEN BASE ON THE COOKING HOB.

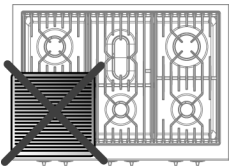

**DO NOT USE** RECEPTACLES OR STEAK GRILLS THAT EXCEED THE OUTER PERIMETER OF THE COOKING HOB.

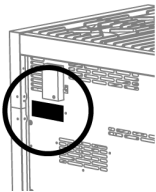

THE IDENTIFICATION PLATE WITH THE TECHNICAL DATA, SERIAL NUMBER AND THE MARK IS CLEARLY VISIBLE ON THE BACK OF THE APPLIANCE; A COPY IS ATTACHED TO THE MANUAL. A SECOND PLATE, INCLUDING DETAILED INFORMATION ABOUT THE MODEL AND SERIAL NUMBER, IS PLACED INSIDE THE EQUIPMENT ON THE LEFT SIDE AND IS VISIBLE ON OPENING THE OVEN DOOR.

**THESE PLATES MUST NEVER BE REMOVED.**



**THE APPLIANCE SHOULD ONLY BE USED BY ADULTS.** DO NOT ALLOW CHILDREN TO APPROACH OR PLAY WITH THE APPLIANCE. NEVER STORE ITEMS THAT CHILDREN MAY ATTEMPT TO REACH ABOVE THE APPLIANCE. THE HEATING UP OF SOME PARTS OF THE APPLIANCE AND OF THE USED PANS MAY BE A DANGER, SO DURING FUNCTIONING AND DURING ALL THE TIME NECESSARY FOR THE COOLING DOWN, TAKE CARE TO POSITION THE HOT PANS IN A WAY TO PREVENT BURNS OR OVERTURNING. AVOID LEAVING THE OVEN DOOR OPEN DURING FUNCTIONING OR IMMEDIATELY SOON AFTER THE SWITCHING OFF. AVOID TOUCHING THE HEATING ELEMENTS INSIDE THE OVEN AND GRILLS AS WELL.



RESTING OR SITTING ON THE OPEN OVEN DOOR, DRAWERS OR STORAGE COMPARTMENT CAN OVERTURN THE APPLIANCE, AND CONSEQUENTLY CAUSE HARM. THE DRAWERS HAVE A DYNAMIC CAPACITY OF 25 KG.

IF THE COOKER IS SET ON A PEDESTAL, APPROPRIATE MEASURES MUST BE TAKEN TO PREVENT IT FROM SLIDING OFF THE PEDESTAL.



WHEN THE APPLIANCE IS DECOMMISSIONED, IT MUST BE DISPOSED OF IN A SUITABLE RECYCLING CENTRE. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (DOORS, ETC.).




***The manufacturer declines any responsibility for damage incurred by persons or objects that is caused by not following the above guidelines or by tampering with any part of the appliance or by using non-original spare parts.***




### 3. Installation

#### DIMENSIONS OF THE COOKING HOBS (mm)

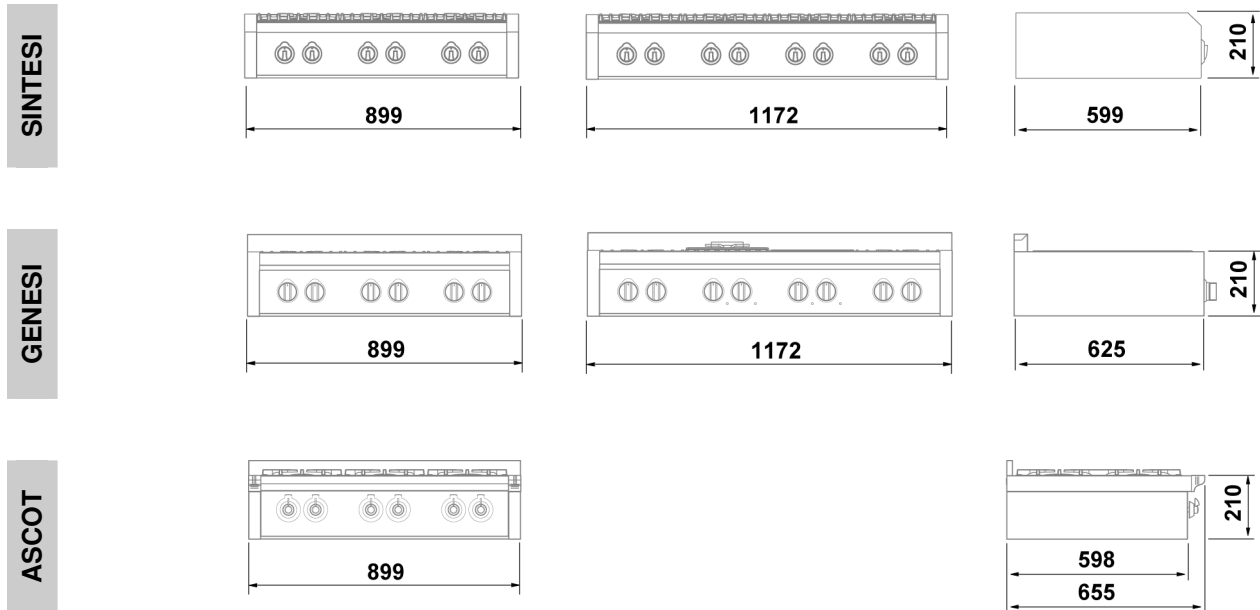

#### DIMENSIONS OF THE COOKERS (mm)

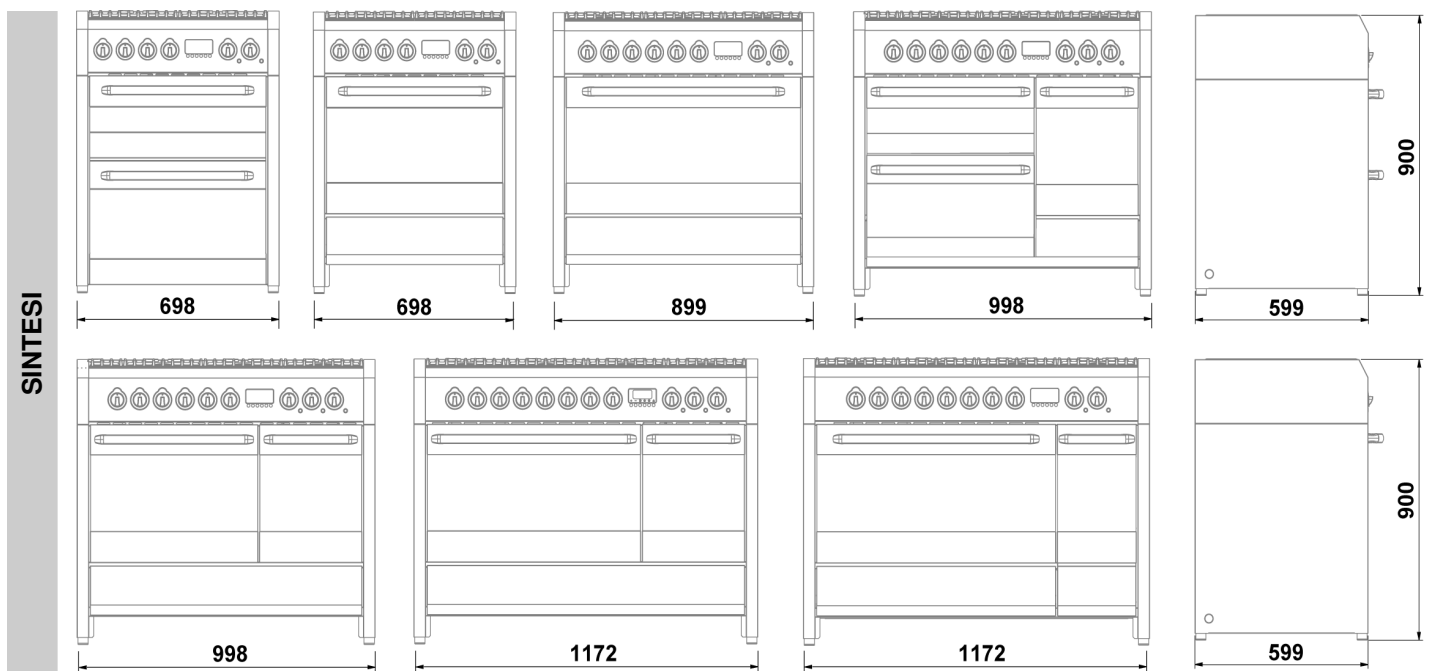







# Instructions for the installer




GENESI

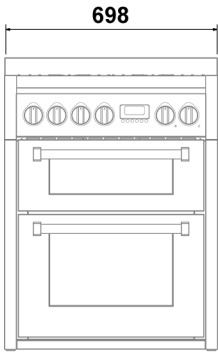


698

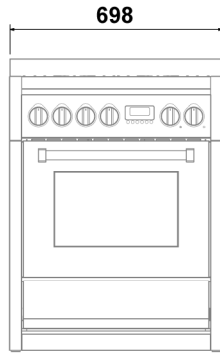

698

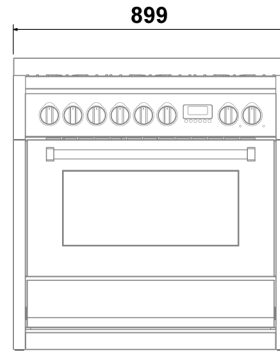


899

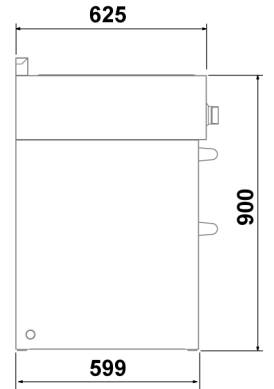


625

900


599

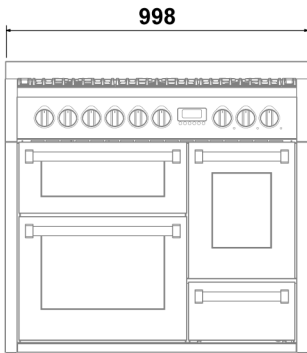


998

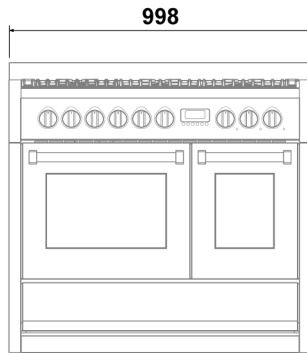

998

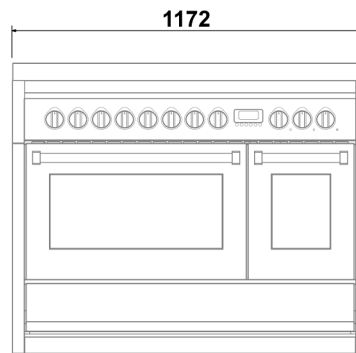

1172

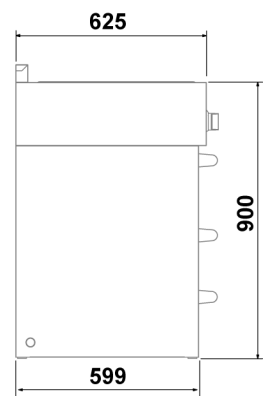


625


900

599


ASCOT

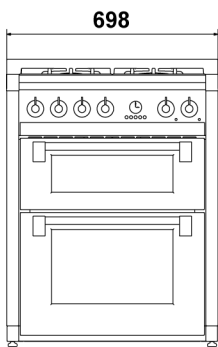


698

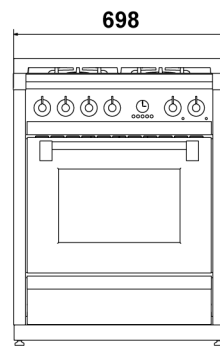

698

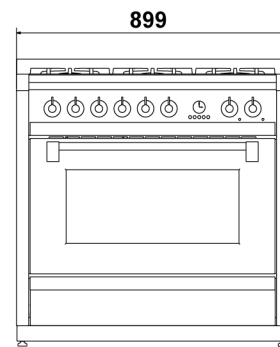


899

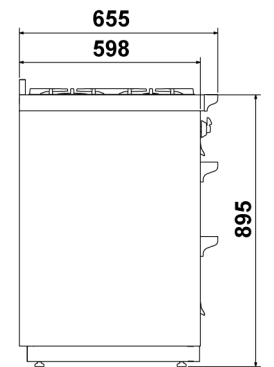


655

895


598

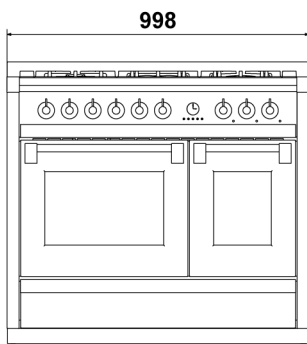


998

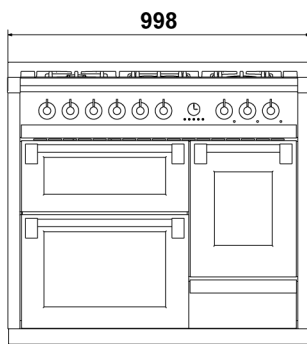

998

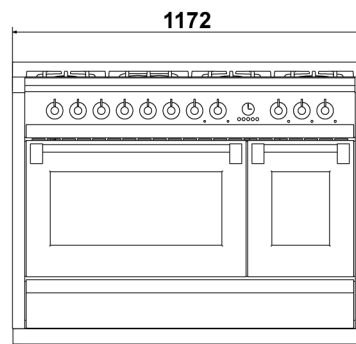

1172

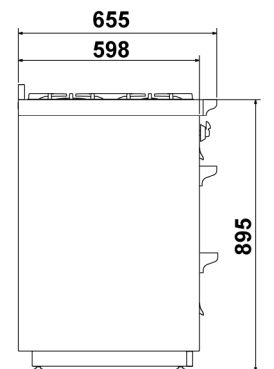

655

895

598



## 3.1 General warnings




**This appliance shall be installed only by authorised personnel and in accordance with the manufacturer's installation instructions, local gas fitting regulations, municipal building codes, water supply regulations, electrical wiring regulations, AS 5601/AG 601 - Gas Installations and any other statutory regulations. Before using the appliance, remove the protective plastic on the control panel, stainless steel parts, etc... After installation the installer must fully test the appliance and ensure it operates correctly before handing it over to the customer.**

The manufacturer declines any responsibility for damage incurred by persons, animals or objects that is caused by not following the above guidelines (cfr. chapter "2. Warnings for safety and use").

The technical data is indicated on the plate located on the back of the appliance. The adjustment conditions are shown on a label applied to the packing and the appliance.



**Do not use the oven door handle for lifting or handling, including while unpacking the appliance.**

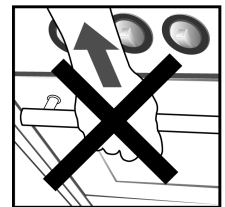


## 3.2 Replacing the adjustable feet

The cooker comes with **standard** feet, already installed.



**The standard feet allow you to adjust the height so that you can level the cooker to the floor; the cooker becomes unstable if you unscrew them too much.**

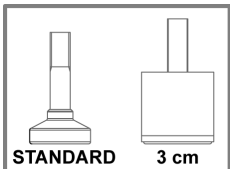

To raise the cooker, you should replace the **standard** feet with higher ones (supplied with some models or ordered from your retailer) for an extra **3 cm** but, should this not be enough for your requirements, you can add another kit from your retailer to raise it even more.




**Before turning the cooker over, we recommend removing all the parts that are not stably attached to it, in particular the cooking hob grids and burners. To lighten the weight of the cooker, the accessories inside the oven may also be removed, thereby preventing accidental damage during the overturning operation.**

Proceed in either of the following ways to replace the feet:


- A** Lifting the cooker off the floor.
- B** Laying the cooker on its back.

Remove the feet from the packing and screw them to the bottom of the cooker.

Make the **final adjustment** of the feet, to level the cooker to the floor, **after completing the gas and electrical connections.**

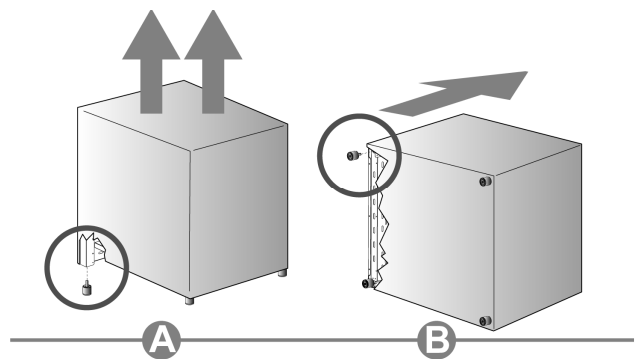

**Should you need to drag the equipment, tighten the feet all the way and then adjust them after placing it where expected.**

 

## 3.3 Fitting the front moulding

For some cooker models, a front moulding is available to complement its aesthetics.




*Before turning the cooker over, we recommend removing all the parts that are not stably attached to it, in particular the cooking hob grids and burners. To lighten the weight of the cooker, the accessories inside the oven may also be removed, thereby preventing accidental damage during the overturning operation.*

### 3.3.1 70cm cooker with double oven and 100cm cooker with triple oven

The moulding is supplied as a standard fitting with the **Sintesi** and **Genesi** series.

To assemble, proceed as follows:

- tilt the cooker backwards;
- align the moulding **A** with the mounting position as shown in the illustration;
- apply the moulding until it fits into the mounting position;
- pull the moulding downward so that it hooks onto the 4 pins **B** (two on the back and one on each side) present on the cooker.

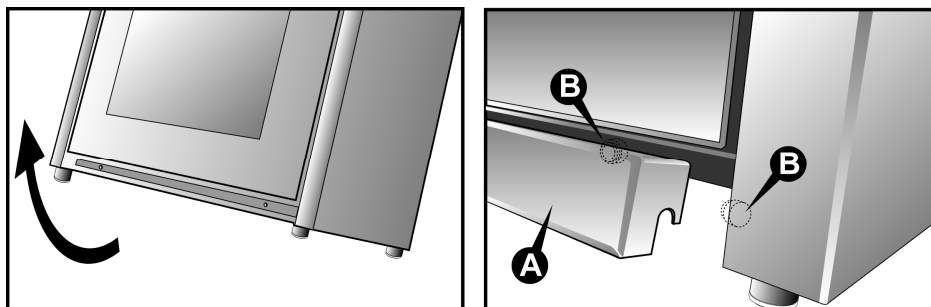


### 3.3.2 Genesi series cooker

The moulding is supplied as a standard fitting with the **Genesi** series whereas it is available only on request (optional) for the **Sintesi** series.

To assemble, proceed as follows:

- tilt the cooker backwards;
- align the moulding **A** with the mounting position as shown in the illustration;
- apply the moulding until it fits into the mounting position;
- pull the moulding downward so that it hooks onto the 4 pins **B** (two on each side) present on the cooker.

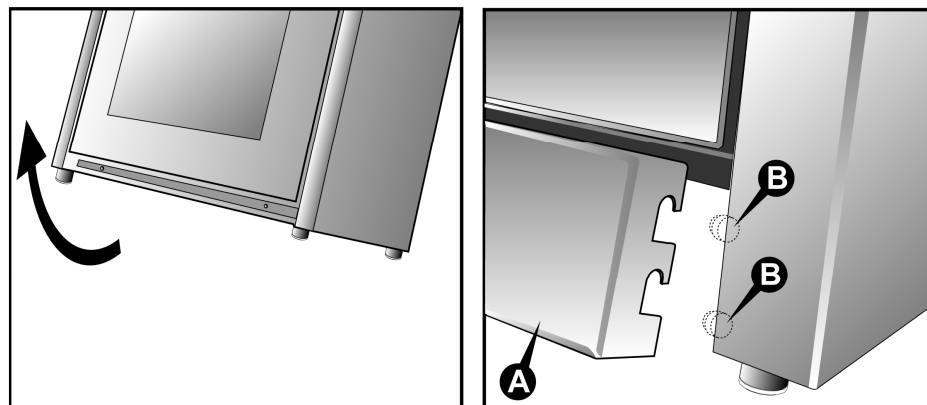




### 3.4 Fitting the front profile

A front profile is supplied for the **Genesi** series models to complement the aesthetic line.

Proceed as follows to install:

- approach profile **A** to the assembly seat as shown in detail in drawing **1**;
- fit the profile until it comes into contact with the assembly seat, pushing it downwards so that it couples with blocks **B** on each end of the cooker (detailed drawing **2**).

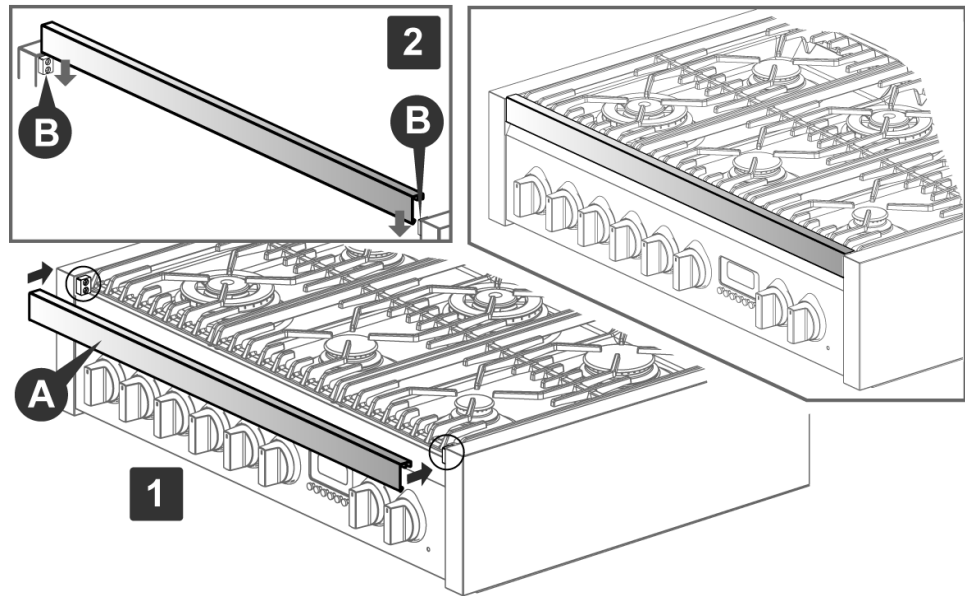




### 3.5 Fitting the splash guard (optional)



*The splash guard must not be used in combination with the stainless steel splashback.*

Proceed as follows to install:

 - rest the splash guard **A** on the back of the surface, making sure the holes are aligned.
- tighten the screws **B** using a Phillips screwdriver.

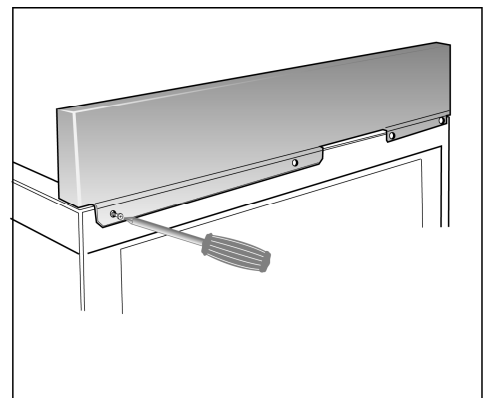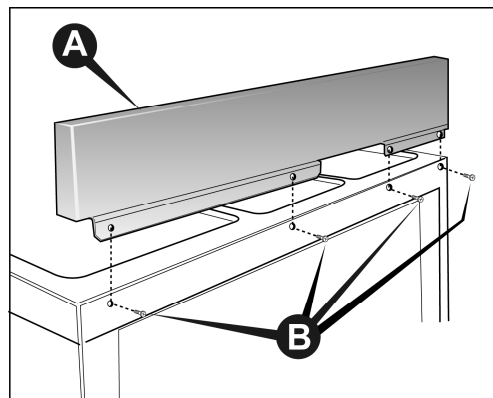





*Any yellowing of the steel over time, which is completely natural, in no way alters its original characteristics. It can be removed using specific steel cleaning products.*



## 3.6 Fitting the telescopic guides (optional)


Proceed as follows to install:

- remove the telescopic guides **A** from the packing and remove all protective film;
- remove all the accessories that are inside the oven;
- position the telescopic guide to the required height by coupling the upper side to the frame (detailed drawing **1**) and then rotate it until the lower side couples; repeat this operation for the opposite side and the other levels;
- slide the telescopic guides forward and position the chosen accessory as shown in detailed drawing **2**;
- reinsert the previously removed accessories into the oven.

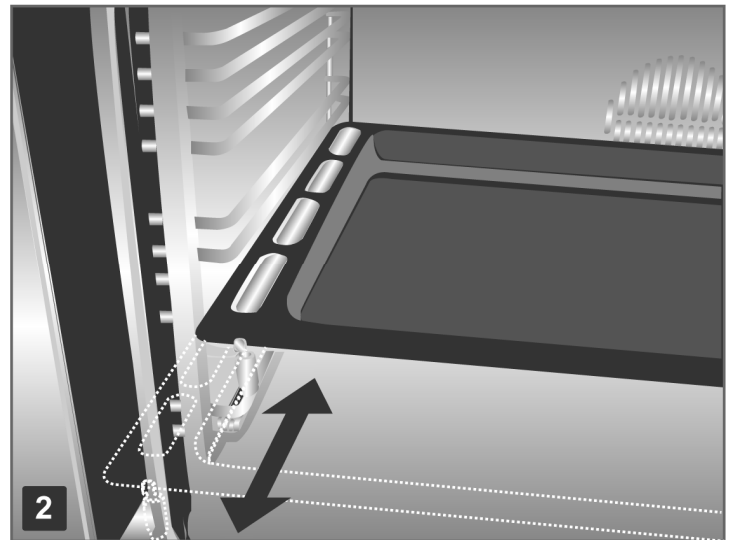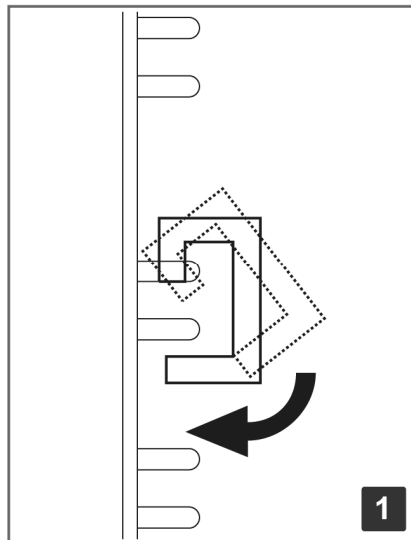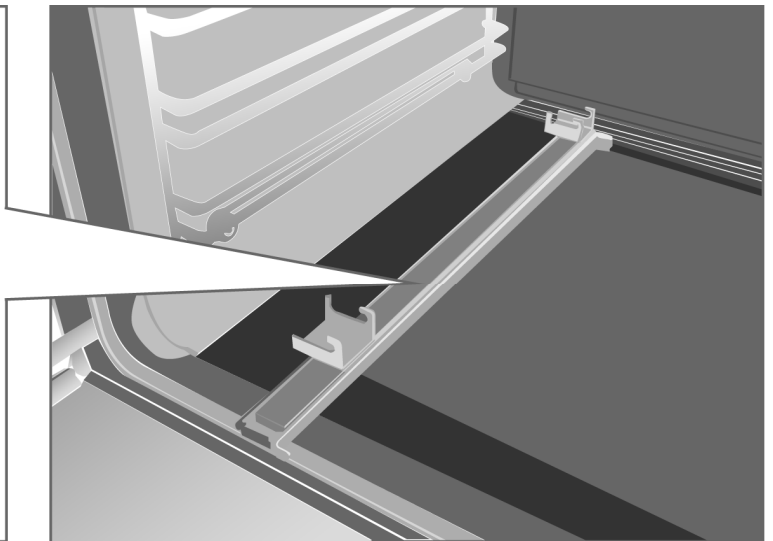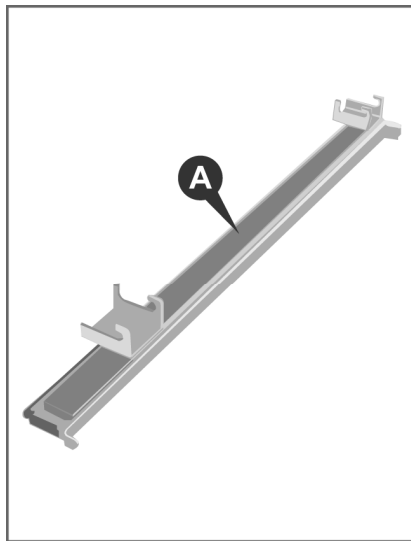



## 3.7 Electric connection

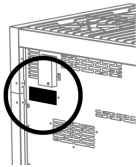


Make sure that the voltage and capacity of the power line conform to the data shown on the plate located on the back of the appliance; a copy is attached to the manual. A second plate, including detailed information about the model and serial number, is placed inside the equipment on the left side and is visible on opening the oven door.

**These plates must never be removed.**



Prepare an omni-polar cutoff device on the power supply line of the appliance with a contact opening distance equal to or more than **3 mm**, located in a convenient position near the appliance.

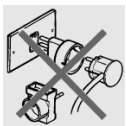

**Do not use reducers, adapters or shunts.**

Before making the electric connection, make sure of the efficiency of the earthing.

Make sure that the relief valve and the home wiring system are able to withstand the appliance load.

**The yellow/green earth cable must not be subject to cutoffs.**

The electric cable must not come into contact with parts whose temperature is more than **50°C** higher than room temperature.

### 3.7.1 Electric power cable section


According to the type of power supply, use a cable that conforms to the following table.

**Running at 415 Vac 3Ph N (models connected according to DIAGRAM "A"):** use a pentapolar cable type H05RR-F (cable measuring 5 x 2.5 mm<sup>2</sup>).


**Running at 230V1N~ (models connected according to DIAGRAM "B"):** **up to 2.9 kW** use a tripolar cable type H05RR-F (cable measuring 3 x 1.5 mm<sup>2</sup>); **between 2.9 kW and 5.4 kW** use a tripolar cable type H05RR-F (cable measuring 3 x 2.5 mm<sup>2</sup>); **between 5.4 kW and 7 kW** use a tripolar cable type H05RR-F (cable measuring 3 x 4 mm<sup>2</sup>); **over 7 kW** use a tripolar cable type H05RR-F (cable measuring 3 x 6 mm<sup>2</sup>).

The end to be connected to the appliance must have the earth wire (**yellow-green**) at least **20 mm** longer.

**415 Vac 3Ph N**  
2,5 mm<sup>2</sup>

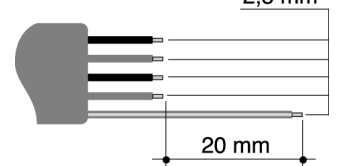

**230V1N~**  
1,5 ÷ 6 mm<sup>2</sup>

 




### 3.7.2 Type of power supply

It is possible to obtain different connections according to the voltage, simply by moving the unconnected cable ends on the terminal board as shown in the following diagrams.

According to the model, consult the table "CONNECTION TO THE TERMINAL BOARD".

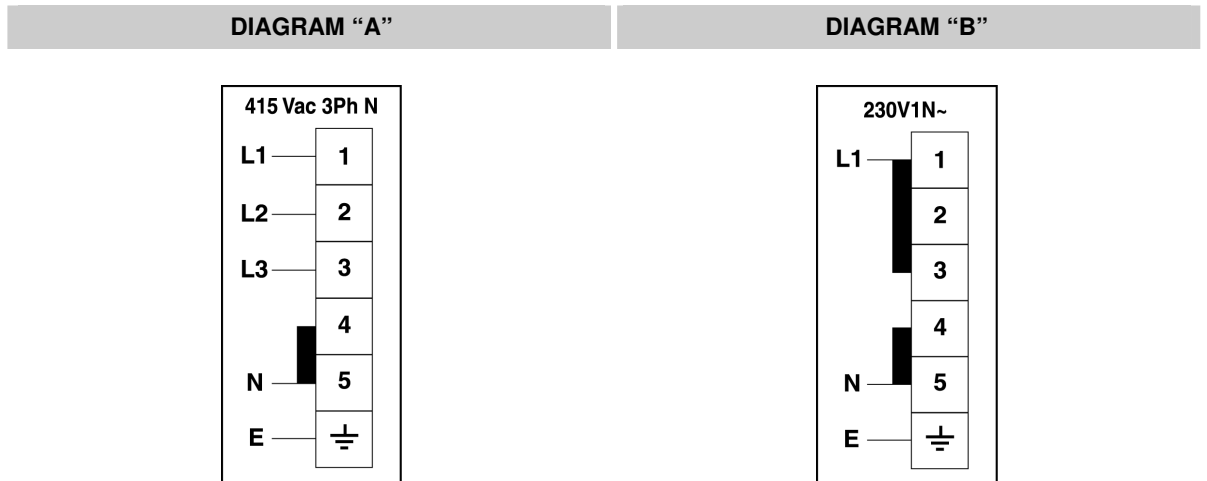

CONNECTION TO THE TERMINAL BOARD		
COOKING HOB	POWER kW	CURRENT DRAW (amps)
COOKING HOB 4 / 6 / 8 BURNERS	0,006	0,025
COOKING HOB 4 / 6 BURNERS + B / T / C	2,4	10
COOKING HOB 4 / 6 BURNERS + G	2,5	10,4
COOKING HOB 4 BURNERS + B / T + C	4,8	20
COOKING HOB 4 BURNERS + B / T + G	4,9	20,4
INDUCTION HOB (5 ELEMENTS)	7,4	30,8
M = MEGA WOK		
B = STEAK GRILL		
T = FRY-TOP		
C = VITROCERAMIC GRIDDLE		
G = GRILL		




<b>CONNECTION TO THE TERMINAL BOARD (TRADITIONAL COOKERS)</b>		
<b>COOKER 1 OVEN</b>	<b>POWER kW</b>	<b>CURRENT DRAW (amps)</b>
COOKER 4 BURNERS (1 OVEN)	2,2	9,1
COOKER 6 / 8 BURNERS (1 OVEN)	2,9	12
COOKER 4 / 6 BURNERS (1 OVEN) + M	2,9	12
COOKER 4 / 6 BURNERS (1 OVEN) + B / T / C	5,3	22
COOKER 4 / 6 BURNERS (1 OVEN) + G	5,4	22,5
COOKER INDUCTION HOB (1 OVEN) (4 ELEMENTS)	9,6	40
COOKER INDUCTION HOB (1 OVEN) (5 ELEMENTS)	10,3	42,9
<b>COOKER 2 OVENS</b>	<b>POWER kW</b>	<b>CURRENT DRAW (amps)</b>
COOKER 6 BURNERS (2 OVENS)	3,6	15
COOKER 8 BURNERS (2 OVENS)	4,4	18,3
COOKER 4 BURNERS (2 OVENS) + M	3,6	15
COOKER 4 BURNERS (2 OVENS)	4,3	17,9
COOKER 4 BURNERS (2 OVENS) + B / T / C	6,0	25
COOKER 4 BURNERS (2 OVENS) + G	6,1	25,4
COOKER 6 BURNERS (2 OVENS) + M	4,3	17,9
COOKER 6 BURNERS (2 OVENS) + B / T / C	6,7	27,9
COOKER 6 BURNERS (2 OVENS) + G	6,9	28,7
COOKER 4 BURNERS (2 OVENS) + M + B / T / C	6,8	28,3
COOKER INDUCTION HOB (2 OVENS) (4 ELEMENTS)	11,7	48,7
COOKER INDUCTION HOB (2 OVENS) (5 ELEMENTS)	11,0	45,8
<b>COOKER 3 OVENS</b>	<b>POWER kW</b>	<b>CURRENT DRAW (amps)</b>
COOKER 6 BURNERS (3 OVENS)	5,7	23,7
COOKER 4 BURNERS (3 OVENS) + M	5,7	23,7
COOKER 4 BURNERS (3 OVENS) + B / T	8,1	33,7
COOKER INDUCTION HOB (3 OVENS) (5 ELEMENTS)	13,1	54,5
M = MEGA WOK		
B = STEAK GRILL		
T = FRY-TOP		
C = VITROCERAMIC GRIDDLE		
G = GRILL		






**DIAGRAM "A"**

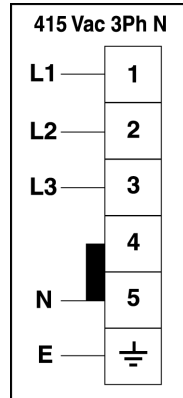

**DIAGRAM "B"**

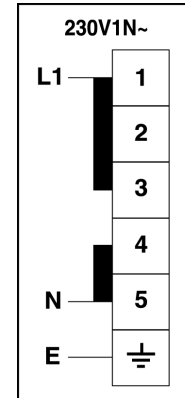

**CONNECTION TO THE TERMINAL BOARD (COOKERS WITH "COMBI STEAM" OVENS)**


COOKER 1 OVEN	POWER kW	CURRENT DRAW (amps)
COOKER 4 BURNERS (1 OVEN)	3,0	12,5
COOKER 6 BURNERS (1 OVEN)	3,6	15
COOKER 4 BURNERS (1 OVEN) + M	3,6	15
COOKER 4 BURNERS (1 OVEN) + B / T	6,0	25
COOKER INDUCTION HOB (1 OVEN) (4 ELEMENTS)	10,4	43,3
COOKER INDUCTION HOB (1 OVEN) (5 ELEMENTS)	11,0	45,8

COOKER 2 OVENS	POWER kW	CURRENT DRAW (amps)
COOKER 6 BURNERS (2 OVENS)	4,5	18,7
COOKER 8 BURNERS (2 OVENS)	5,1	21,2
COOKER 4 BURNERS (2 OVENS) + M	4,5	18,7
COOKER 4 BURNERS (2 OVENS) + B / T	6,9	28,7
COOKER 6 BURNERS (2 OVENS) + M	5,0	20,8
COOKER 6 BURNERS (2 OVENS) + B / T	7,4	30,8
COOKER 4 BURNERS (2 OVENS) + M + B / T	7,4	30,8
COOKER INDUCTION HOB (2 OVENS) (5 ELEMENTS)	11,9	49,5

M = MEGA WOK

B = STEAK GRILL

T = FRY-TOP

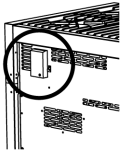


### 3.7.3 Replacing the electric cable

To replace the electric cable, it is necessary to access the terminal board. It is located on the back of the appliance, at the top left, as shown in the figure.

To replace the cable, proceed as follows:


- open the terminal board box;
- unscrew the screw **A** that locks the cable;
- loosen the screw contacts and replace the cable with one of the same length that corresponds to the specifications in the table in section "3.7.1 Electric power cable section";
- the "yellow-green" earth wire must be connected to the terminal  $\oplus$  and must be approximately **20 mm** longer than the line cables;
- the neutral "blue" wire must be connected to the terminal marked with the letter **N**;
- the line wire must be connected to the terminal marked with the letter **L**.

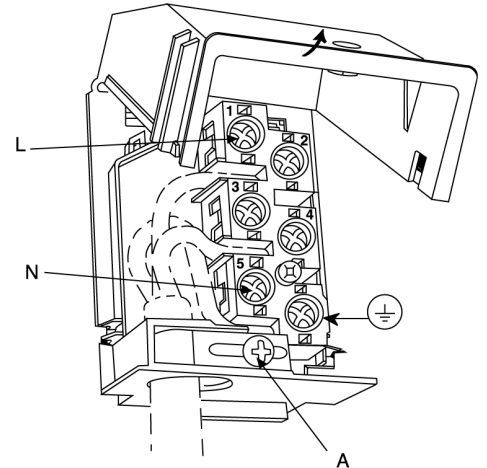

### 3.8 Electric power table

FRY-TOP	STEAK GRILL	GRILL	VITROCERAMIC GRIDDLE
2.4 kW	2.4 kW	2.5 kW	2.4 kW
1	1	1	1

COOKER WIDTH	OVENS NO.	MAIN OVEN					SIDE OVEN				UPPER OVEN			
		1.4 kW	1.0 kW	2.8 kW	2.5 kW	0.025 kW	1.2 kW	0.5 kW	1.7 kW	0.025 kW				
1172	1	1	1	1	1	2								
1172	2	1	1	1	1	2	1	1	1	1				
		1.2 kW	0.85 kW	1.9 kW	2.1 kW	0.025 kW	1.2 kW	0.5 kW	1.7 kW	0.025 kW	1.2 kW	0.85 kW	1.9 kW	0.025 kW
998	2	1	1	1	1	1	1	1	1	1				
998	3				1	1	1	1	1	1	1	1	1	1
		1.4 kW	1.0 kW	2.8 kW	2.5 kW	0.025 kW								
889	1	1	1	1	1	2								
		1.2 kW	0.85 kW	1.9 kW	2.1 kW	0.025 kW					1.2 kW	0.85 kW	1.9 kW	0.025 kW
698	1	1	1	1	1	1								
698	2				1	1					1	1	1	1

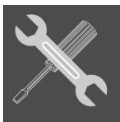

## 3.9 Ventilation in rooms with gas appliances



This appliance is not connected to an exhaust device for products of combustion. Ventilation must be in accordance with AS5601/AG 601 - Gas Installations. In general, the appliance should have adequate ventilation for complete combustion of gas, proper flueing and to maintain temperature of immediate surroundings within safe limits. Pay particular attention to standards applied to room aeration.

This appliance can only be installed in ventilated rooms, according to current standards, so as to allow, with openings onto external walls or appropriate ducts, for correct natural or forced ventilation that **permanently and sufficiently** ensures both the air intake necessary for correct combustion and the expelling of vitiated air. It is recommended that the appliance have a rangehood fitted directly above or ceiling fan in close proximity to the appliance.



In all other cases, i.e. when other gas appliances are present in the same room, or, if it is not possible to have natural direct ventilation, it is necessary to create natural, indirect ventilation or forced ventilation: **for this type of operation, it is necessary to contact a authorised person for installing and creating the ventilation system in strict compliance with the guidelines set out in current standards.**


The openings should be positioned so as not to allow the formation of any unpleasant air current for the occupants. Furthermore, it is forbidden to use flues already used by other appliances to expel products of combustion.

## 3.10 Gas connection




*The appliance's setting conditions are stated on the plate on the back of the appliance.*

*Gas-powered devices for home use, which are not connected to a conduit for the evacuation of combustion products, must not cause a concentration of carbon monoxide that could pose a health risk to the persons exposed in relation to the time of exposure.*

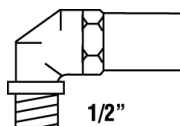


We recommend checking that the appliance is properly set up for the type of gas distributed. The connection to the gas pipes must be made in a workmanlike manner, in compliance with current standards that prescribe the installation of a safety tap at the end of the pipe. The Gas Connection is male 1/2" BSP and is situated at the left hand, top rear of the appliance, 74mm from the side and 700mm from the floor (cookers) or 25mm from the underside (cooktops). The appliance is factory set for Natural gas. The test point pressure should be adjusted to 1.00kPa with the Wok and Semi-Rapid burners operating at maximum on 120cm models and the Wok burner operating at maximum on 90cm models.

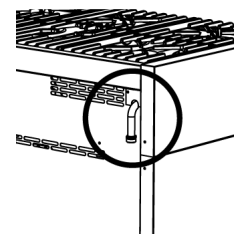


**For propane** a pressure regulator set to provide a supply pressure of 2.75kPa conforming to standards regulations in force should be fitted. The seals must conform to standards regulations in force. Fit the test point assembly supplied with the appliance to the gas connection when installing for use with Propane Gas. Once the gas has been connected, check the seal of the unions with a soap and water solution.

It is possible to connect the gas in the following ways:


- using iron or copper rigid pipe as specified in AS5601 table 3.1;
- using a Plumbezy flexible hose, AGA approval number 6196, 10mm ID, class D and between 1-1.2m long in accordance with AG601 for a "high level connection". For cookers supplied with a flexible hose the restraining chain fitted to the rear of the cooker must be fixed to the wall as follows.
  1. Supply fixing points on either side of the cooker (vertically in line with the chains attached) at approximately 100mm above floor level.
  2. Firmly secure the chains at these points.
  3. Supply similar fixing points at approximately 700mm above floor level using open hooks.
  4. Loop the chains over these hooks to prevent the cooker from accidentally tilting.
  5. Removing the chains from the hooks enables the cooker to be pulled out for service. Ensure that the chains prevent stress on the hose assembly while the cooker is in this position.

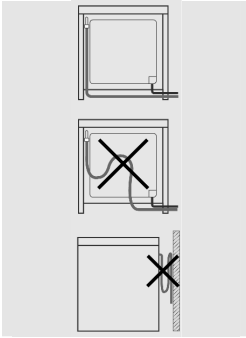



- Do not allow the pipes to be constricted or crushed;
- Pipes must not be subject to tractive force or torsional stress;
- Do not allow the pipes to come into contact with cutting or sharp edges, etc...
- Do not allow the pipes to come into contact with parts that can reach temperatures of **70°C** above room temperature;
- Make sure the entire length of the pipes can be inspected.
- Do not use the Natural Gas Regulator supplied with the appliance for Propane Gas.

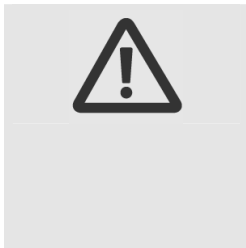


*The unit must be coated in heat-resistant material (minimum 90°C). If the appliance is installed close to other units, the minimum space suggested in the following diagram must be left.*

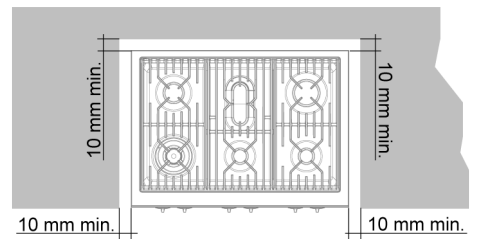

Any adjoining wall surface situated within 200mm from the edge of any hob burner must be a suitable non-combustible material for a height of 150mm for the entire length of the hob. Any combustible construction above the hotplate must be at least 600mm above the top of the burner and no construction shall be within 450mm above the top of the burner. Where the distance from the edge of any burner to a horizontal surface is less than 200mm, the surface must be either: 10mm (min) below the level of the hob, or have the vertical component of the surface suitably covered with a non-combustible material as specified in AS 5601 - AG 601.

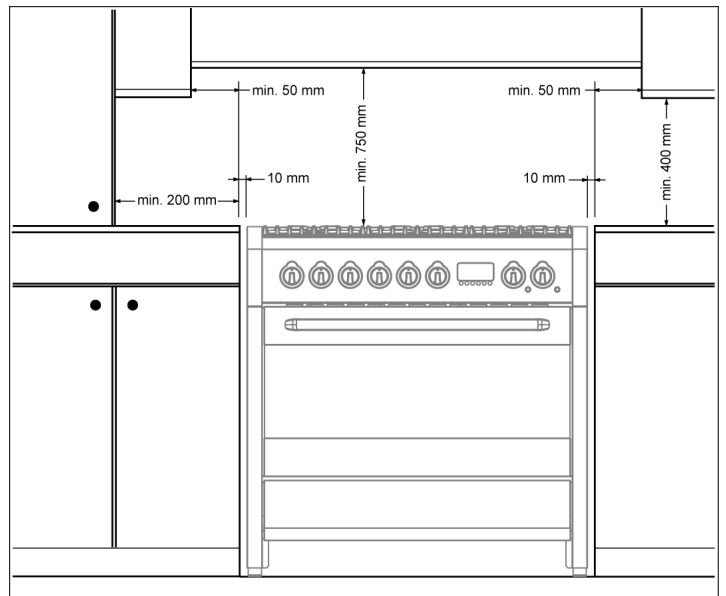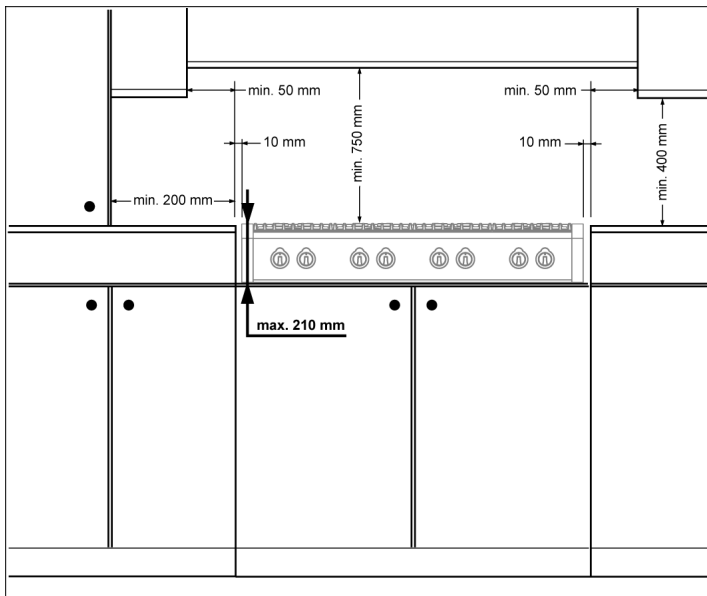

 

## 3.11 Gas adjustments




The injectors not supplied with the appliance should be requested from the Service Centre.

For cooktops, the Data Label is located on the underside of the appliance. A duplicate label is supplied to adhere in an accessible area adjacent to the appliance. For cookers, the label is situated in the appliance drawer. This appliance is suitable for Natural Gas and Propane; ensure that the available gas supply matches the Data Label.


If the cooking appliance is set up for a different type of gas than that available, its injectors must be replaced, the minimum flow regulated and the rubber-holder changed. In order to replace the injectors in the cooking hob, it is necessary to carry out the following operations:

- remove the grids;
- remove the burners and burner caps (**Fig. A**);
- take out the injector (**Fig. B**) and replace it with one suitable for the new type of gas (see "**GENERAL INJECTORS TABLE**" on page 22-24);
- replace the gas label (on the rear of the appliance) with the new one provided with the injectors kit;
- refit all parts by following the disassembly instructions in reverse order and taking care to position the burner cap correctly on the burner.

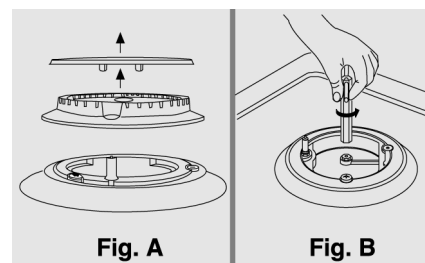

### 3.11.1 Minimum flow of valved cooking hob taps

- Switch on the burner and turn the control knob towards the minimum flow position **0**;
- remove the knob;
- using a screwdriver, adjust the internal screw **Z** until the correct low flame is obtained;
- refit the knob.

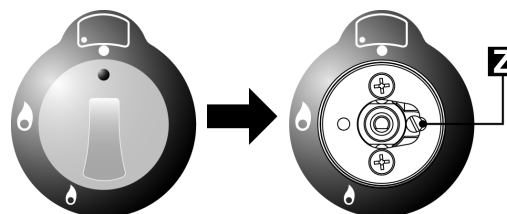


- *Unscrew the adjustment screw **Z** to increase the flow, or tighten it to reduce the flow.*
- *The adjustment is correct when the low flame measures approximately **3** or **4** mm.*
- *For **propane** the adjustment screw should be tightened all the way.*
- *When changing quickly from maximum to minimum flow and vice versa **make sure that the flame does not go out.***

## 3.12 Connecting to LPG




**Gas may only be connected to a gas installation, whether bottle supplied or other.**

When converting from Natural Gas to Propane ensure that the NG regulator is removed and replaced with the Test Point Assembly. A gas regulator suitable for a supply pressure of 2.75kPa should be part of the gas tank supply and should be adjusted with the Wok burner operating at maximum. Replace the old data plate with one which is suitable for the type of gas for which the appliance has been regulated.

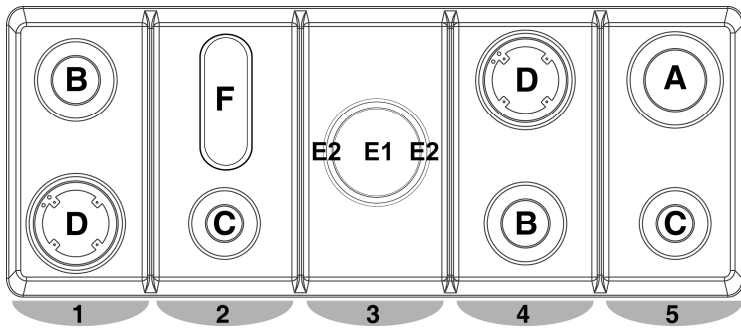

The hob is made up of the **5** indicated **modules**:

- modules **1** and **5** are featured on all the cookers;
- modules **2**, **3** and **4** are included depending on which cooker is purchased and can be replaced with electric modules (fry-top, steak grill, grill or vitroceramic hob).

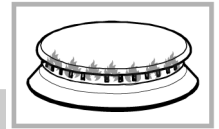


## GENERAL INJECTORS TABLE


**ALUMINUM**

TYPE OF GAS	kPa	NOZZLE NO.	BURNERS POSITION TYPE	MAX. CONSUMPTION
				MJ
NATURAL GAS	1.00	1.50	RAPID (A)	11.50
		1.20	SEMI RAPID (B)	6.90
		0.90	AUXILIARY (C)	3.90
		1.65	TRIPLE-RING (D)	13.00
		0.80 (E1) 1.65 (E2)	MEGA WOK (E1/E2)	3.30 13.00
		1.20	FISH KETTLE (F)	7.20
		ULPG	2.75	0.95
0.73	SEMI RAPID (B)			6.90
0.53	AUXILIARY (C)			3.90
1.00	TRIPLE-RING (D)			13.00
0.50 (E1) 1.00 (E2)	MEGA WOK (E1/E2)			3.30 13.00
0.75	FISH KETTLE (F)			7.30


70

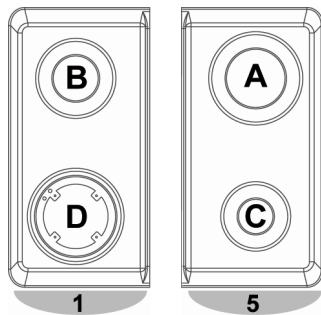


90 / 100

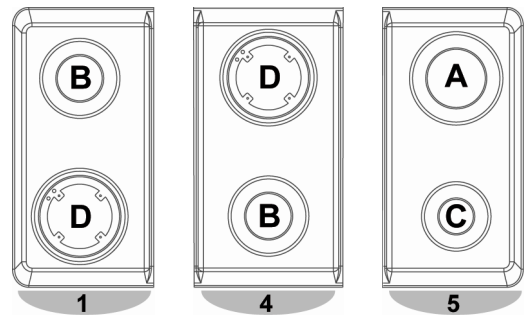

90 / 100

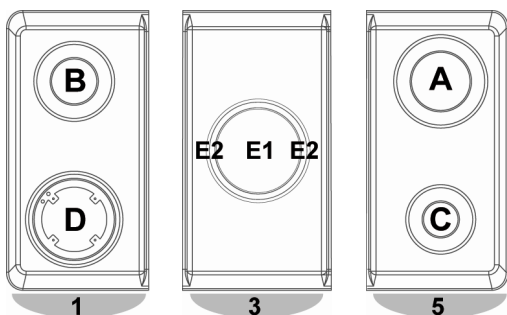

90 / 100

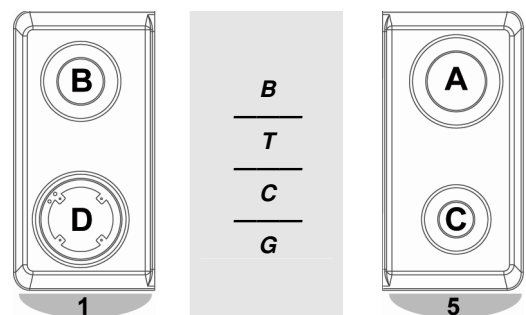

**B** = STEAK GRILL

**T** = FRY-TOP

**C** = VITROCERAMIC GRIDDLE



**G** = GRILL





# Instructions for the installer

AUS


120 120

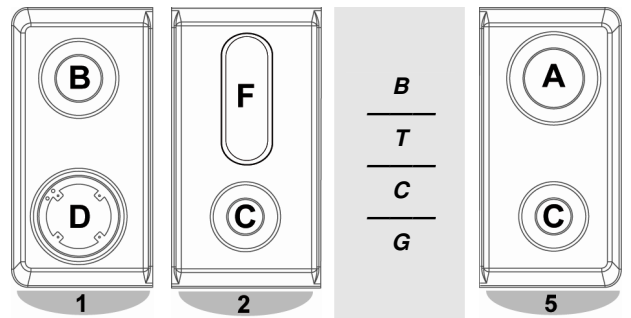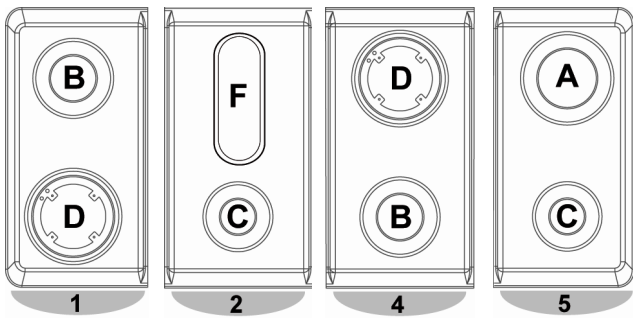

120 120

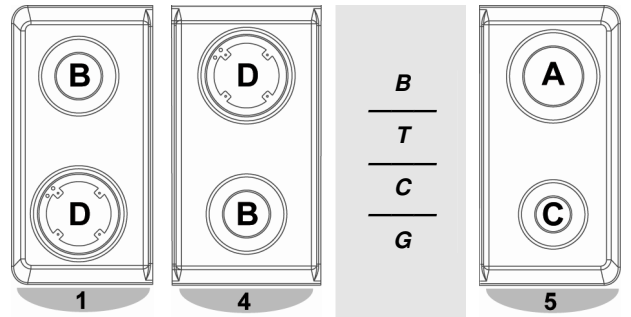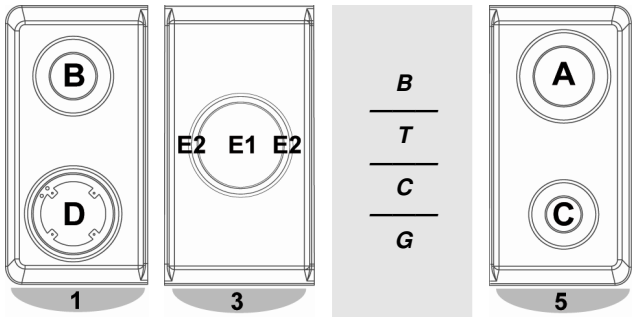

120

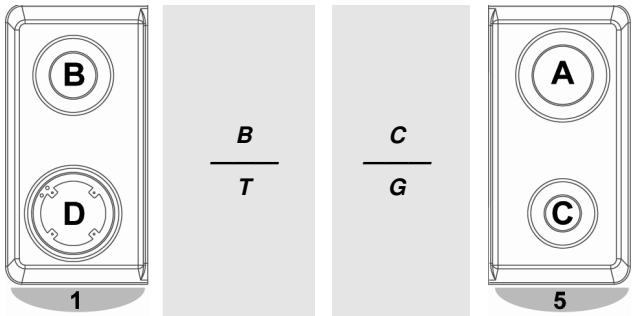


**B** = STEAK GRILL

**T** = FRY-TOP


**C** = VITROCERAMIC GRIDDLE

**G** = GRILL

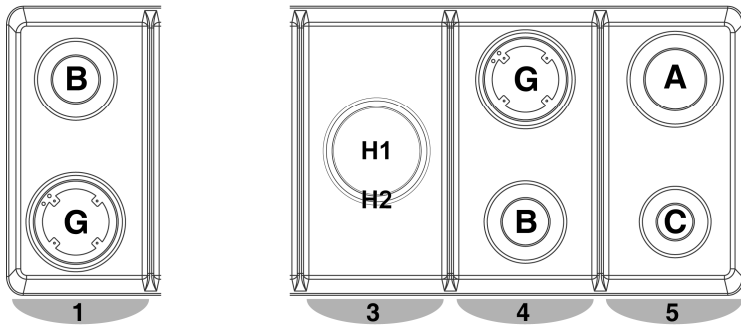

The hob is made up of the 4 indicated **modules**:

- modules **1** and **5** are featured on all the cookers;
- modules **3** and **4** are included depending on which cooker is purchased and can be replaced with electric modules (fry-top, steak grill, grill or vitroceramic hob).

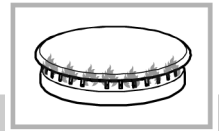



## GENERAL INJECTORS TABLE

ALUMINUM / BRASS

TYPE OF GAS	kPa	NOZZLE NO.	BURNERS POSITION TYPE	MAX. CONSUMPTION
				MJ
NATURAL GAS	1.00	1.50	RAPID (A)	11.50
		1.20	SEMI RAPID (B)	6.90
		0.90	AUXILIARY (C)	3.90
		1.65	WOK (G)	13.00
		0.80 (H1) 1.65 (H2)	MEGA WOK (H1/H2)	3.30 13.00
ULPG	2.75	0.95	RAPID (A)	11.50
		0.73	SEMI RAPID (B)	6.90
		0.53	AUXILIARY (C)	3.90
		1.00	WOK (G)	13.00
		0.50 (H1) 1.00 (H2)	MEGA WOK (H1/H2)	3.30 13.00



70

90 / 100

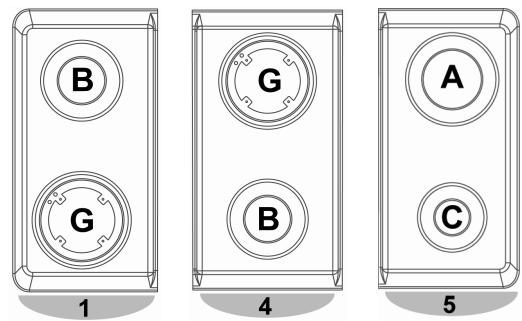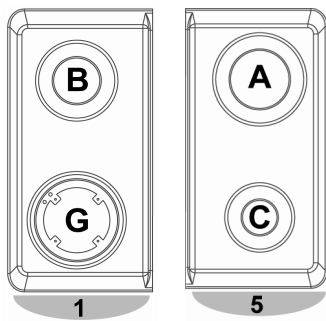

90 / 100

90 / 100

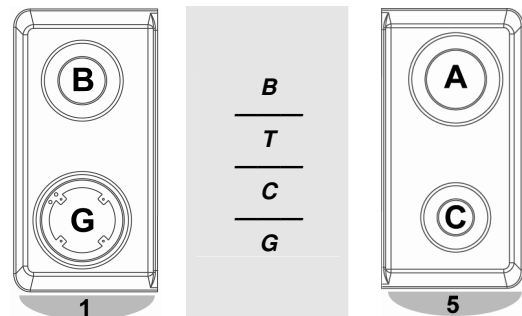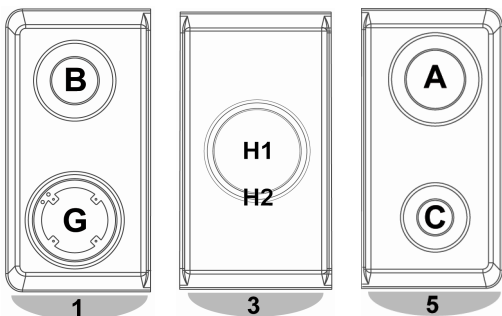

**B** = STEAK GRILL

**T** = FRY-TOP

**C** = VITROCERAMIC GRIDDLE

**G** = GRILL









# Instructions for the installer

AUS

120 120

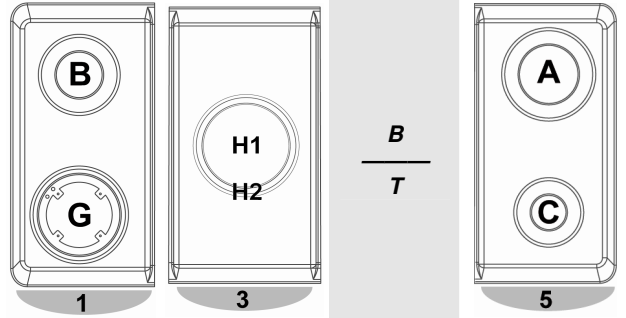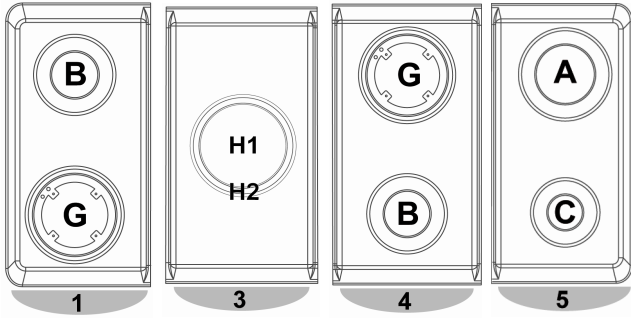

120 120

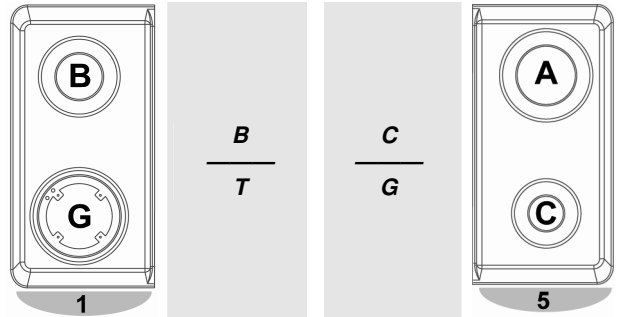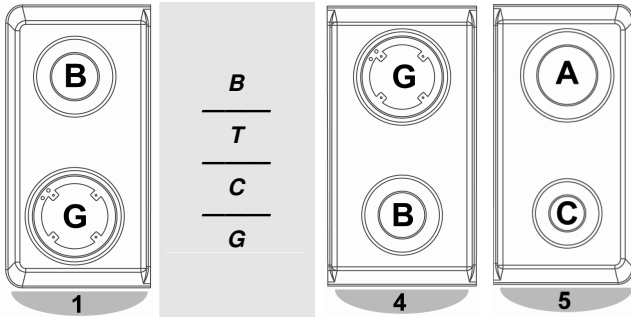

**B** = STEAK GRILL

**T** = FRY-TOP

**C** = VITROCERAMIC GRIDDLE

**G** = GRILL




## 4. Final operations

### 4.1 Stability chain


The cooker is fitted with a stability device such as a proprietary stability chain as shown and firmly secured to the fabric of the building.

Whatever the position, remember to leave enough room for the cooker to be pulled out for cleaning and service.

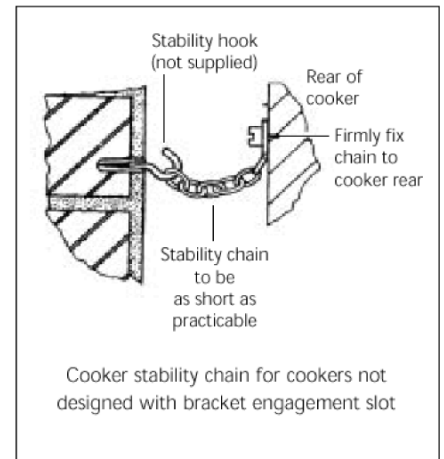

### 4.2 Levelling the cooker to the floor

After having made the electrical and gas hook-ups, level the cooker to the floor using the adjustable feet that were previously screwed onto the bottom of the cooker.

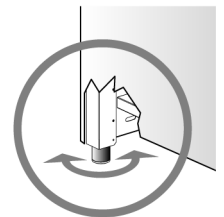

Should it be necessary to drag the cooker, **screw the feet in completely and carry out the final regulation only when the other operations are completed.**




Check all connections for gas leaks with soap and water. **DO NOT** use a naked flame for detecting leaks. Ignite all burners to ensure correct operation of gas valves, burners and ignition. Turn gas taps to low flame position and observe stability of the flame. When satisfied with the hotplate, please instruct the user on the correct method of operation. In case the appliance fails to operate correctly after all checks have been carried out, refer to the authorised service provider in your area.

### 4.3 Adjustment of the drawer height

The clips of height adjustment are located in the lower side and at the right and left ends of the drawer.

By turning the lever **A** the drawer will raise of **3 mm**.

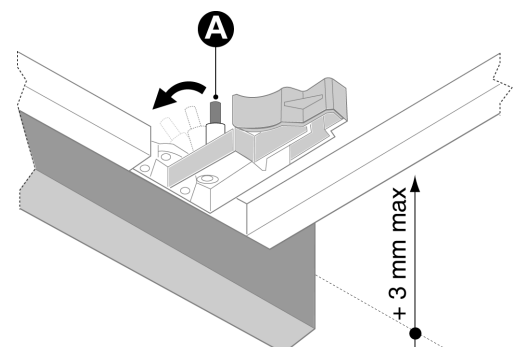




## 5. Description of controls


### 5.1 The front panel




All the commands and controls for the cooking hob and oven are on the front panel.
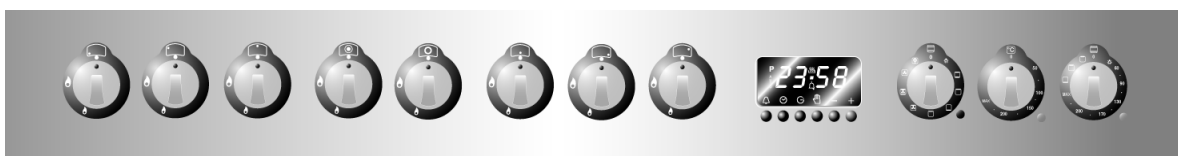
#### CONTROL PANEL



#### DESCRIPTION OF HOB BURNER KNOB

The flame is lit by simultaneously pressing and turning the knob anticlockwise to the low flame symbol .

To regulate the flow of the flame, turn the knob to between the maximum  and minimum  settings. Turn off the burner by returning the knob to position .



#### LAYOUT OF BURNERS – Description of symbols



REAR LEFT



REAR CENTRE LEFT



CENTRE FRONT



FRONT CENTRE LEFT



FRONT LEFT



REAR RIGHT



REAR CENTRE RIGHT



CENTRE REAR




FRONT CENTRE RIGHT



FRONT RIGHT

#### DESCRIPTION OF “MEGA WOK” BURNER KNOBS

The central “Mega Wok” burner is controlled by two knobs: one switches on the inner **central ring** and the second operates the **outer ring**.

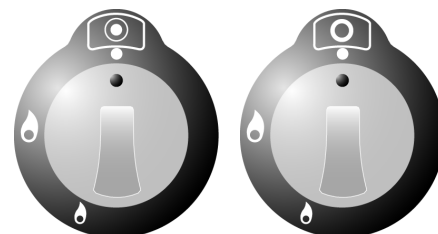

#### LAYOUT OF BURNER RINGS – Description of symbols



CENTRAL RING



OUTER RING




*Using the burner with dual-crown flame-spreader: if while using the hob you notice the flame changes consistency or sputters between the central and outer crowns of the burner, this is due to the continuous power required by this type of burner and should be considered as normal.*



## DESCRIPTION OF FRY-TOP / STEAK GRILL AND GRILL KNOB

**FRY-TOP/STEAK GRILL:** is equipped with **differentiated heating**. The entire cooking surface can be used, or only one of the two halves, front or rear. The knobs that regulate the energy individually control the temperature of the two heating elements. A **green light** indicates that the appliance is heating.

**GRILL:** two warning lights give essential information on how the appliance is working. The **green light** switches on to indicate that the appliance is powered (ON). A **orange light** indicates that the heating element is heating up.

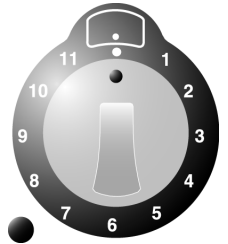

## LAYOUT OF HEATING ELEMENTS - Description of symbols




REAR




FRONT


## DESCRIPTION OF TIMER KNOB (available only on certain models)

Turn the knob all the way clockwise to wind the timer. It is possible to set the required time up to a maximum of **60 min**. The bell rings briefly when the preset time has elapsed.

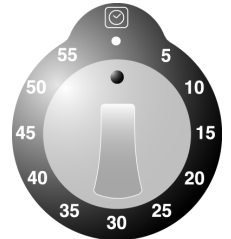

## DESCRIPTION OF VITROCERAMIC HOB KNOBS

Besides the normal knobs that regulate the energy, the vitroceramic hob is equipped with knobs for **differentiated heating**. Settings from **1** to **11** control the heating of the internal element, setting the knob to the symbol  the outer element also operates.

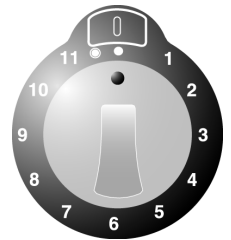

## LAYOUT OF HEATING ELEMENTS - Description of symbols



REAR LEFT



REAR RIGHT



FRONT LEFT



FRONT RIGHT




CENTRAL



## DESCRIPTION OF KNOBS ON THE INDUCTION HOB

The induction hob is fitted with knobs for controlling the power level.  
 To select a different power level, turn the control knob to the required value (1 - 9 and P).  
 "P" is the maximum power applicable to each radiant element.

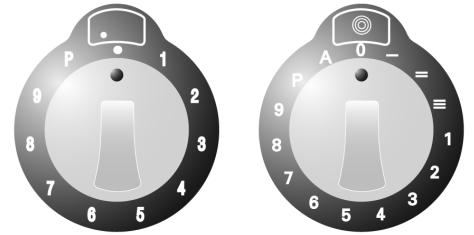


Turn the knob to set the desired power value (see table in section "10.3"). Turn the knob to display the actual desired power level, whereas the one selected with the knob is only indicative.

## LAYOUT OF RADIANT ELEMENTS – Description of symbols




All the controls for the radiant elements are located on the front panel and the relative displays are visible on the hob.

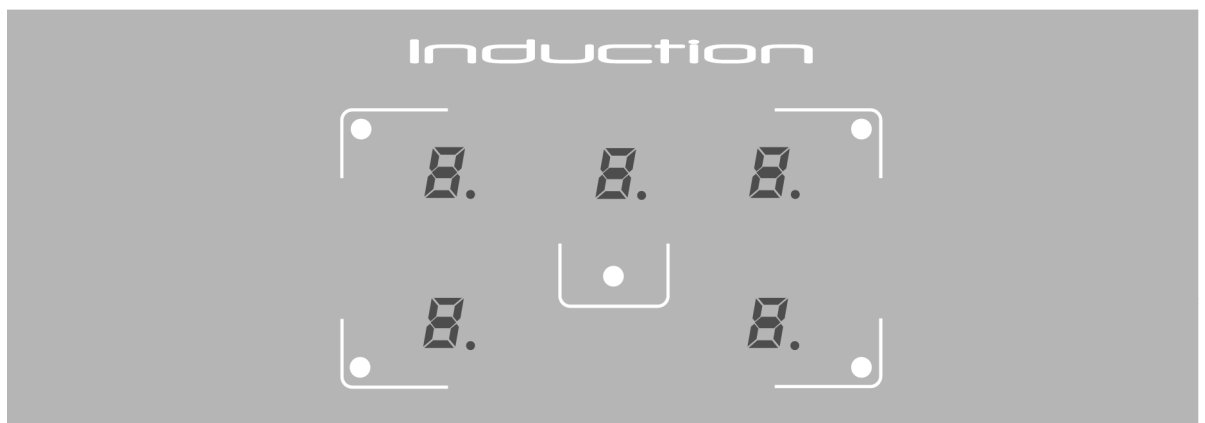




## DESCRIPTION OF ELECTRIC OVEN KNOBS



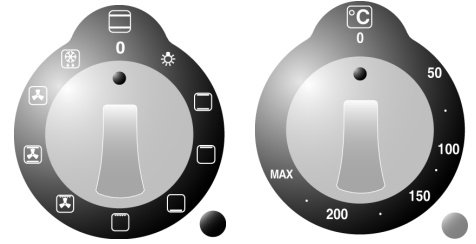






The electric oven is controlled by two knobs: **function switch knob** and **thermostat knob**. They allow you to choose the most suitable type of heating for different cooking requirements, by switching on the heating elements appropriately and setting the required temperature (from **50°C** to **MAX**).



Below the oven knobs there are two warning lights: the **green light** signals the oven is working; the **orange light** indicates that the preset temperature has been reached. The **orange light** switches on and off to indicate when the heating automatically kicks in to maintain the temperature inside the oven at the level set on the thermostat knob.


The oven has an **internal light**. The light is always on while the oven is working: it can be switched on while the oven is off, for cleaning purposes, by turning the function switch knob to the symbol .

## DESCRIPTION OF SYMBOLS ON FUNCTION SWITCH KNOB


	SWITCH ON LIGHT INSIDE OVEN		GRILL-FAN ELEMENT
	UPPER AND LOWER HEATING ELEMENTS		UPPER AND LOWER HEATING ELEMENTS – FAN
	UPPER HEATING ELEMENT		HEATING ELEMENT-CONVECTION
	LOWER HEATING ELEMENT		DEFROST
	GRILL ELEMENT		

## DESCRIPTION OF AUXILIARY ELECTRIC OVEN KNOB



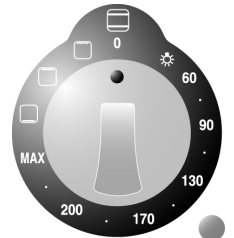

Some cooker models are equipped with an auxiliary electric oven with natural convection, controlled by a single knob. By positioning the knob appropriately and by setting the required temperature, both upper and lower heating elements will switch on. It is possible to set one of the functions described in the table, but in this case the temperature of the chosen heating element will be automatically set to the **MAX** temperature value.



Below the auxiliary oven knob there is an **orange light**, which indicates when the oven has reached the set temperature. The **orange light** switches on and off to indicate when the heating automatically kicks in to maintain the temperature inside the auxiliary oven at the level set on the control knob.

The auxiliary oven has an **internal light**. The light is always on while the oven is working: it can be switched on while the oven is off, for cleaning purposes, by turning the function switch knob to the symbol .


## DESCRIPTION OF SYMBOLS ON AUXILIARY ELECTRIC OVEN KNOB

	SWITCH ON LIGHT INSIDE OVEN		UPPER HEATING ELEMENT
<b>60÷MAX</b>	UPPER AND LOWER HEATING ELEMENTS		GRILL ELEMENT + SPIT
	LOWER HEATING ELEMENT		



## DESCRIPTION OF GRILL OVEN KNOB

The electric oven, equipped with function grill with natural convection, is controlled by a single knob. By positioning the knob appropriately and by setting the required temperature, both upper and lower heating elements will switch on. It is possible to set one of the functions described in the table, but in this case the temperature of the chosen heating element will be automatically set to the **MAX** temperature value.

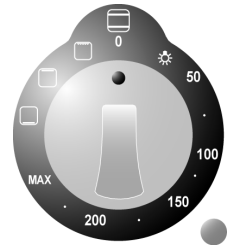

Below the grill oven knob there is an **orange light**, which indicates when the oven has reached the set temperature. The **orange light** switches on and off to indicate when the heating automatically kicks in to maintain the temperature inside the grill oven at the level set on the control knob.


The grill oven has an **internal light**. The light is always on while the oven is working: it can be switched on while the oven is off, for cleaning purposes, by turning the knob to the symbol ☀.

## DESCRIPTION OF SYMBOLS

	SWITCH ON LIGHT INSIDE OVEN		UPPER HEATING ELEMENT
<b>50÷MAX</b>	UPPER AND LOWER HEATING ELEMENTS		GRILL ELEMENT
	LOWER HEATING ELEMENT		

## DESCRIPTION OF CONVECTION OVEN KNOB

The convection oven is controlled by a single knob. This allows the user to choose the most suitable type of heating for different cooking requirements by setting the required temperature value (from **50°C** to **MAX**).

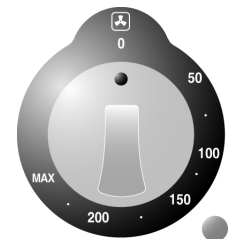

Below the convection oven knob there is an **orange light**, which indicates when the oven has reached the set temperature. The **orange light** switches on and off to indicate when the heating automatically kicks in to maintain the temperature inside the convection oven at the level set on the control knob.

The oven has an **internal light**. The light is always on while the oven is working.




## DESCRIPTION OF COMBINATION STEAM MULTIFUNCTION OVEN KNOBS

The electric oven is controlled by **two knobs**: **function selection** knob and **temperature selection** knob.

They allow you to choose the most suitable type of heating for different cooking requirements, by switching on the heating elements appropriately and setting the required temperature (from **50°C** to **MAX**).

Below the oven knobs there are two warning lights: the **green light** signals the oven is working; the **orange light** indicates that the preset temperature has been reached. The **orange light** turns on and off to indicate automatic heating has activated or deactivated in order to maintain the set temperature inside the oven.

The oven has an **internal light**. The light is always on while the oven is working: it can be switched on while the oven is off, for cleaning purposes, by turning the function switch knob.

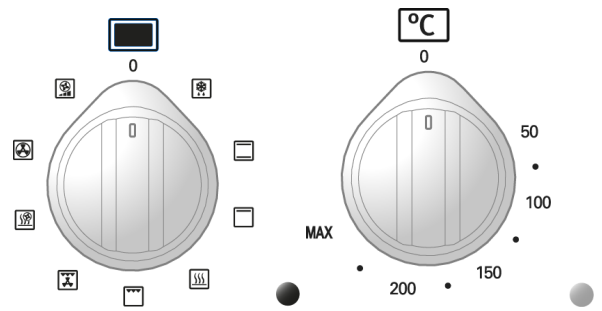

## DESCRIPTION OF SYMBOLS ON FUNCTION SELECTION KNOB



DEFROST



UPPER AND LOWER HEATING ELEMENTS



UPPER HEATING ELEMENT



STATIC STEAM



GRILL ELEMENT



FAN ASSISTED GRILL



FAN ASSISTED STEAM



FAN-ASSISTED REAR HEATING ELEMENT



RAPID HEATING





## DESCRIPTION AND USE OF DIGITAL ELECTRONIC CLOCK + MINUTE MINDER WITH ELECTRIC OVEN SWITCH-OFF

The end of cooking display electronically checks the operation of the oven. Programming the display allows the user to set the oven to switch on and off at set times.



	TIMER BUTTON
	COOKING TIME BUTTON
	END OF COOKING BUTTON
	MANUAL OPERATION BUTTON
-	DECREASE VALUE BUTTON
+	INCREASE VALUE BUTTON

### SETTING THE TIME

When using the oven for the first time, or after a power cut, the display flashes regularly indicating 0:00.

Press button to stop the flashing. Press the value variation buttons - or + **within 5 seconds** to increase or decrease by one minute at a time. Press one of the two value variation buttons until the current time appears.



*Before setting the end of cooking display, it is necessary to select the required function and temperature. The function **P** is not enabled.*

### SEMI-AUTOMATIC COOKING

This setting automatically switches off the oven at the end of the cooking.

Press button and the display lights up showing the figures 0:00; hold down and press at the same time the value variation buttons - or + to set the cooking time.

Release the button to begin the count of the programmed cooking time and the display shows the current time together with symbols **AUTO** and .

### AUTOMATIC COOKING

This setting switches the oven on and off automatically.

Press button and the display lights up showing the figures 0:00; hold down and press at the same time the value variation buttons - or + to set the cooking time.

Press button to display the sum of the current time plus the cooking time: hold down and press at the same time the value variation buttons - or + to set the end of cooking time.

Release the button to begin the programmed count and the display shows the current time together with symbols **AUTO** and .



*After the setting, press button to see the remaining cooking time. Press button to see the end of cooking time.*

### END OF COOKING

At the end of the cooking, the oven switches off automatically and at the same time an intermittent bell rings. After deactivating the bell, the display once again shows the current time together with symbol , which signals the oven has returned to manual conditions.



### ADJUSTING THE VOLUME OF THE BELL


The volume of the bell can be varied (on 3 levels) while it is operating by pressing button .

### DEACTIVATING THE BELL

The bell automatically stops ringing after **seven minutes**. It is possible to deactivate it manually by pressing button .



*After pressing button  the oven begins to operate once again: to switch it off, turn the function switch knob and the thermostat knob to "0".*



 




It is also possible to deactivate the bell by pressing any one of the function buttons. The oven switches off regardless of the function or set temperature and the **AUTO** symbol flashes. To stop the **AUTO** symbol flashing, press button , turn the function selector switch and thermostat to "0".

### TIMER


The end of cooking display can also be used as a simple timer.



*Using the display as a timer does not interrupt the operation of the oven at the end of the set time.*

Press button  and the display shows the figures ; hold down and press at the same time the value variation buttons  or . Release the button  to begin the programmed count and the display shows symbols  and .



 


*After programming the timer, the display once more shows the current time. To display the time remaining, press button .*





*Setting inconsistent values is logically prevented (e.g. the end of cooking display does not accept a contrast between an end of cooking time and a longer cooking time).*

### DELETING SET DATA

With the program set, hold down the button of the function you wish to delete while at the same time reaching value  with the value variation buttons  or . Deleting the cooking time is interpreted by the display as the end of the cooking.

### MODIFYING SET DATA

The data set for cooking can be modified at any moment by holding down the button of the function and at the same time pressing the value variation buttons  or .



## USING AND PROGRAMMING THE DIGITAL ANALOGUE CLOCK ON ASCOT OVENS

The digital clock enables the oven to be set to **automatically** switch on and off.



	TIMER KEY
	COOKING END KEY
	TIME SETTING AND RESET KEY
	DECREASE KEY
	INCREASE KEY

### INITIAL POWER-ON AND SETTING THE TIME

When first powering on the appliance or following a power failure the display flashes. Press the key to stop the flashing and use the to **set the time** (hold down the keys to scroll rapidly).

### MANUAL USE



*This function is for using the oven without any programming.*

It is always possible to switch from a programmed function to “**Manuale**” (Manual) function, by pressing the key; choose “**Manuale**” if no cooking programmes are to be used.

### PROGRAMMING THE TIMER



*This function activates an audible alarm after a preset time, without interfering with the operation of the oven.*

The digital analogue clock can also be used as a **timer**:

- press the key and the display will light up as shown in **Fig. 1**;
- use the keys to set the required time; the display will illuminate **one segment** for each minute set (**Fig. 2** shows a cooking time of 10 minutes).  
The timer starts automatically and the symbol will stop flashing. After a few seconds the display returns to clock function;
- press to display the time remaining. When the set time is reached, an audible alarm sounds for **7 minutes** and the symbol will flash;
- press the key to reset the programme.



Fig. 1



Fig. 2



## PROGRAMMING THE COOKING DURATION



*This function is for programming the cooking duration after which the oven switches off automatically.*

- Set the required cooking function and temperature using the control knobs;
- press the **SSS** key to enter the programming menu; the display will light up as shown in **Fig. 3**;
- use the **+ / -** keys to set the **cooking duration**; one press of key **+** adds **one minute** cooking time and every **twelve minutes one internal segment** illuminates (**Fig. 4**). After **7 seconds** the cooking programme starts and the symbol **→** appears.  
At the end of the set cooking time, an audible alarm sounds for **7 minutes**; the symbol **→** and the numbers on the dial start to flash, **switching the oven off automatically**;
- press any key to stop the alarm or the **☺** key to delete the programme.



Fig. 3



Fig. 4

## PROGRAMMING THE COOKING DURATION AND COOKING END



*This function is for programming the oven to switch on at a set time and switch off automatically after cooking.*

Set the required cooking function and temperature using the control knobs.

In addition to the cooking duration, also set the time the oven is to switch on:

- press the **SSS** key to enter the programming menu; the display will light up as shown in **Fig. 3** and the symbol **→** appears;
- use the **+ / -** keys to set the **cooking duration**; one press of key **+** adds **one minute** cooking time and every **twelve minutes one internal segment** illuminates (**Fig. 4**);
- press the **SSS** key again and use the **+ / -** keys to set the **cooking end** time (cooking end time minus cooking duration = cooking start time), the symbol **→** appears.  
After **7 seconds** the display shows the current time while the **cooking start** time and the **cooking duration** are shown with the illuminated **internal segments**, which remain **steady** until cooking starts and **flash** for the duration of the cooking time.  
At the set time, the oven **switches on automatically**; at the end of the set cooking time, an audible alarm sounds for **7 minutes**; the symbols **→** **→** and the numbers on the dial start to flash, **switching the oven off automatically**;
- press any key to stop the alarm or the **☺** key to delete the programme.

**Fig. 5** shows a programming example: the current time is 7:06 and cooking is programmed to start at 8.00 and end at 9.00.

At 8:00, the **internal segments** between 8 and 9 will start to flash, while the **hour hand** will remain still.



Fig. 5



## BEEPER

At the end of each preset function, an audible alarm sounds which turns off automatically after **7 minutes**; press the key to turn the beeper off immediately.

Seven different types of audible alarm are available on the appliance; to choose between them press the key **for at least 7 seconds**; each time the key is pressed again the tone changes.

## BRIGHTNESS

The brightness of the clock can be changed; press the and keys simultaneously for **at least 5 seconds** and then use the / keys to change the brightness of the dial.

## GRAPHICS

The graphics of the clock can be changed; press the and keys simultaneously and use the key to display and choose the preferred graphics.



## 6. Using the cooking hob



Make sure that the flame caps, the burner caps and the grids are fitted correctly.



During normal operations, the appliance heats up considerably. Caution should therefore be used. **Do not allow children to approach the appliance.** Do not leave the cooking hob unattended while it is on.

### 6.1 Switching on the burners



All the hob burner knobs have the following symbols:

- tap closed
- 🔥 high flame
- 🔥 low flame

The low flame setting is found by turning the knob anticlockwise all the way. All intermediate settings must be selected between the high flame and low flame, **never between high flame and closed.**



Using the burner with dual-crown flame-spreader: if while using the hob you notice the flame changes consistency or sputters between the central and outer crowns of the burner, this is due to the continuous power required by this type of burner and should be considered as normal.

#### 6.1.1 One-touch lighting

The hob burners are equipped with a "one-touch" lighting system. To switch on one of the burners, press the knob corresponding to the required burner and turn it anticlockwise to the low setting 🔥. Hold down the knob to activate the automatic "one-touch" lighting system. When the burner is on, hold down the knob for approximately **10 seconds**, to allow the safety valve to open. In the event of a power cut, the burner can also be lit with a match (see section "6.1.2 Manual lighting").



Should the burner switch off accidentally, the safety thermocouple blocks the gas flow, even when the tap is open.



The device should not be activated for longer than **15 seconds**. If after that time it fails to operate stop pressing the knob, open the window and **wait 1 minute** before trying again. In case the flame goes out accidentally turn off the knob and do not try to switch on the burner for at least **1 minute**.

#### 6.1.2 Manual lighting

To light one of the burners, move a lit match towards the burner, press the corresponding knob and turn it anticlockwise to the minimum setting 🔥. Release the knob.

### 6.2 Switching off the burners

At the end of the cooking, return the knob to position ●.

### 6.3 Abnormal Operation

Any of the following are considered to be abnormal operation and may require servicing:

- Yellow tipping of the hob burner flame.
- Sooting up of cooking utensils.
- Burners not igniting properly.
- Burners failing to remain alight.
- Burners extinguished by cupboard doors.
- Gas valves, which are difficult to turn.

In case the appliance fails to operate correctly, contact the authorised service provider in your area.




## 7. Using the fry-top / steak grill





During normal operations, the appliance heats up considerably. Caution should therefore be used. **Do not allow children to approach the appliance. Do not leave the fry-top/steak grill unattended while it is on.**

Depending on the model, the appliance is fitted with a **fry-top** with smooth griddle, or a **steak grill** with lined griddle.

**FRY-TOP**

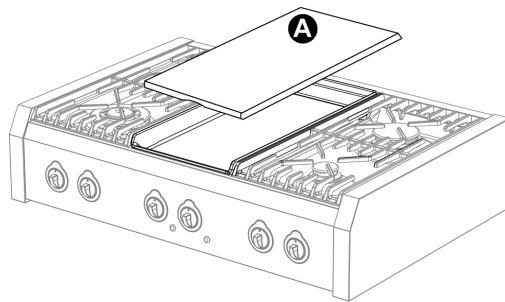

**STEAK GRILL**

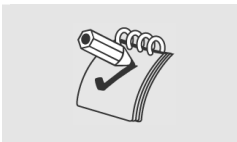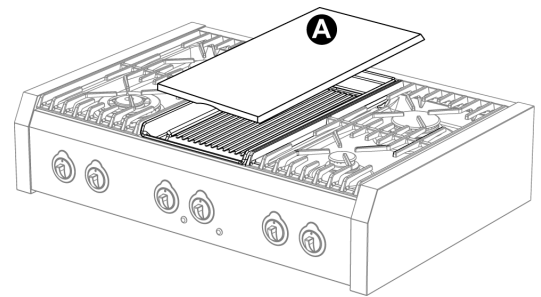

Before using the hob burners, **always remove** the safety cover **A** from its seat (only available on some models), to prevent the steel blackening irreversibly over time. The function of this cover is not to cover food while cooking. **If the hob burners are already switched on: remove and handle the cover while wearing oven gloves.**

### 7.1 Before switching on the fry-top / steak grill

The first time it is used, the fry-top/steak grill griddle may develop an acrid or burnt smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. To eliminate this problem, clean the griddle as described in section "13.9 Cleaning the fry-top / steak grill" before use.

### 7.2 Switching on

The fry-top/steak grill is equipped with **differentiated heating**. The entire surface of the griddle can be used, or only one of the two halves, front or rear.

Position the control knob of the heating element to the required setting. The **green light** switches on to indicate the appliance is working. Place the food on the griddle and cook as preferred.

### 7.3 Energy regulator table

The following table offers only indicative values because, according to the thickness and type of food, as well as personal taste, the heat should be higher or lower.



1 - 4	Maintaining the heat on the griddle
5 - 7	For light cooking
8 - 9	To grill
10 - 11	To grill thicker meat
11	For rapid warming and cleaning

### 7.4 Switching off

After cooking, return the knob to position ●.



## 8. Using the volcanic rock grill



During normal operations, the appliance heats up considerably. Caution should therefore be used. **Do not allow children to approach the appliance. Do not leave the grill unattended while it is on.**



The volcanic rock grill has a consumption of **2500W**. This appliance must therefore be installed where this power consumption can be ensured in total safety.

Before using the hob burners, **always remove** the safety cover **A** from its seat (only available on some models), to prevent the steel blackening irreversibly over time. The function of this cover is not to cover food while cooking. **If the hob burners are already switched on: remove and handle the cover while wearing oven gloves.**


### 8.1 Before switching on the grill

The first time it is used, the grill may develop an acrid or burnt smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. To eliminate this problem, clean all its components beforehand as described in section “13.10 Cleaning the volcanic rock grill”.

### 8.2 Switching on

Proceed as follows:


- Remove the cast iron grill **very carefully** to avoid breaking it;
- lift the heating element upwards and lock it, by moving the lock system **S** towards the left as shown in the figure;
- fill the safety vat with the volcanic rock, taking care to evenly cover the whole surface, so that it does not go over the edge.

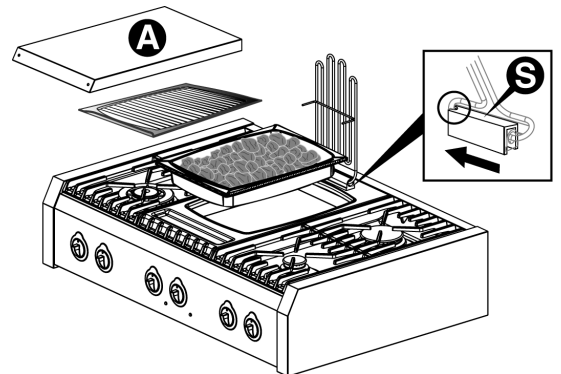

Water (**up to 2 litres**) can be used in the safety vat instead of volcanic rock. It is advisable to use water when cooking very fatty meat (e.g. sausage, bacon, etc.), as the meat juices will melt instantaneously in the water. This method prevents excessive smoke and simplifies the cleaning operations described in section 13.10.

The heating element should **never be switched on** unless the safety vat contains the volcanic rock or water as specified above.

- Release the lock system **S** and lower the heating element;
- reposition the cast iron grill over the heating element as shown in the figure. The cast iron grill ensures adequate heat distribution.
- The appliance is ready to be switched on.

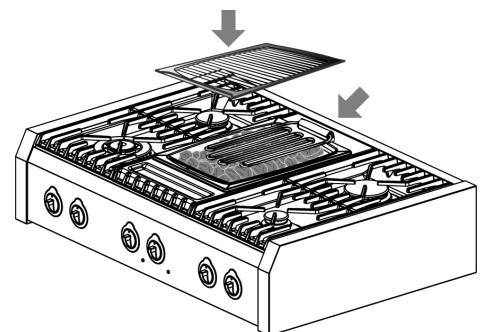

Before use, **preheat** the cast iron grill for **5 or 10 minutes** by turning the energy regulator knob to the maximum setting (**11**). The **green light** signals the appliance is working.

- Now turn the energy regulator knob to the required setting (see section “8.3 Energy regulator table”). Place the food on the cast iron grill and cook as required.






The appliance can also be used in the same way as an “**open burner**”, which is ideal for simmering. Only use multi-function pans whose dimensions are compatible with the cooking surface of the cast iron grill. This type of cooking is ideal for: beef stews, grilled pork, blanquette, rabbit with beer, tongue.

Proceed as follows:

- **preheat the** cast iron grill by turning the energy regulator knob to the maximum setting (**11**) for a few seconds;
- turn the regulator knob back to the minimum setting (**1**);
- position the multi-function pan containing the food to be cooked on the cast iron grill;
- put the lid on the pan to keep in humidity or remove to reduce.

### 8.3 Energy regulator table

The following table offers only indicative values because, according to the thickness and type of food, as well as personal taste, the heat should be higher or lower.

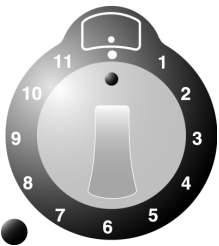

1 - 4	Maintaining the heat on the cast iron grill
5 - 7	For light cooking
8 - 9	To grill
10 - 11	To grill thicker meat
11	For rapid warming and cleaning

### 8.4 Switching off

After cooking, return the knob to position ●.



## 9. Using the vitroceramic hob




During normal operations, the appliance heats up considerably. Caution should therefore be used. **Do not allow children to approach the appliance. Do not leave the vitroceramic hob unattended while it is on.**

### 9.1 General warnings


The first time it is heated, the vitroceramic hob may develop an acrid or burnt smell caused by oily residue from manufacturing, which disappears completely after repeated use.

The vitroceramic hob has different power consumptions depending on the type of heating element used. The diagram shows the values of the power consumed.

In the envisaged cases, the first numeric value refers to the total power, whereas the value that follows the symbol "/" refers to the inside diameter, with the exception of the central heating element, whose value that follows "/" refers to the outer diameter.

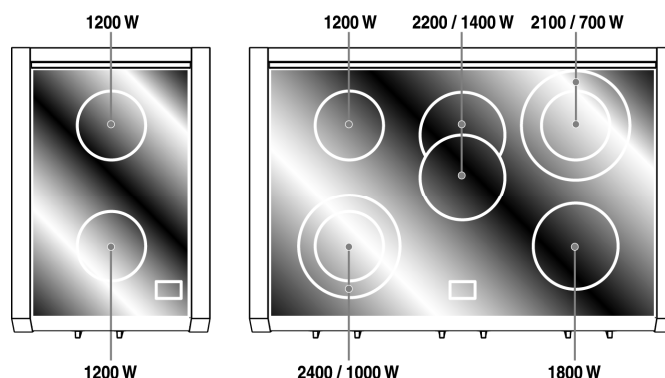


### 9.2 Switching on

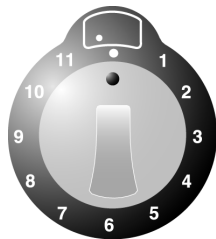

Position the pan or pot with the food to be cooked inside it on the required heating element. Turn the energy regulator knob to the required setting. After a few moments, the **latent heat light** corresponding to the selected heating element switches on.

If the vitroceramic hob is used to boil water, once it has boiled, turn the energy regulator knob to a lower setting to prevent the liquid in the pot from boiling over and soiling the surface.

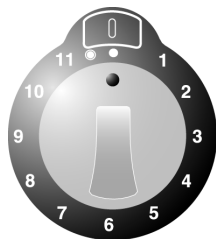


Some knobs are fitted with a **supplementary heating** setting (**griddle with dual heating element**). To activate it, turn the energy regulator knob to position 0.

### 9.3 Switching off

After cooking, return the knob to position 0.

The vitroceramic hob features a **latent heat light** which reproduces in reduced scale the position of the heating diameters. This light signals that the surface area is still hot.

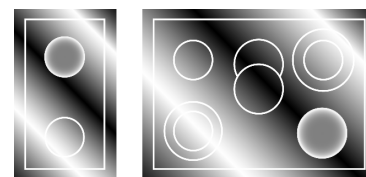

**Do not clean or touch the surface until the latent heat light has switched off.**



## 10. Using the induction hob

The hob is equipped with one radiant generator per cooking zone. Each generator located below the glass ceramic cooking surface generates an electromagnetic field that induces a thermal current in the base of the pan.

In induction cooking, heat is not transmitted from a heat source, but created by inductive currents directly inside the pan.



### *Advantages of induction cooking:*

- *Energy saving thanks to the direct transmission of energy to the pan, compared with traditional electric or gas cooking.*
- *Safer thanks to the transmission of energy solely to the pan rested on the hob.*
- *Highly efficient energy transmission from the induction cooking zone to the base of the pan.*
- *Rapid heating speed.*
- *Reduced risk of burns, since the cooking surface is heated solely at the base of the pan.*
- *Spilt food does not stick to the surface of the hob.*

### 10.1 General warnings

Remove all labels and self-adhesives from the ceramic glass.

Before connecting the appliance to the mains, ensure it has been standing **at room temperature for at least 2 hours**.



People with a pacemaker or other similar devices must ensure that the operation of their devices is not jeopardised by the induction field, the frequency range of which is **between 20 and 50 kHz**.

Do not wear metal objects or necklaces in direct contact with the body. When entering the radiating field of the induction hob, they may overheat with an ensuing risk of scalding. Non-magnetisable metals (e.g. gold or silver) do not carry this risk.

Objects with a magnetic strip (credit cards, swipe cards, floppy discs, etc.) must not be left near the appliance while it is on.

Do not heat canned food or other sealed containers. The pressure that builds up inside the container during cooking may cause it to explode.

Do not place metal objects such as cookware or cutlery on the surface of the hob as they can overheat, with an ensuing risk of scalding.

Never cover the appliance with a cloth or a protection sheet. This is supposed to become very hot and catch fire.

Do not use the glass surface of the hob as a countertop or work surface.

Make sure no cable of any fixed or moving appliance contacts with the glass or the hot saucepan.




Any damage arising from the use of saucepans unsuitable for induction cooking, or of removable accessories between the pan and the radiant element, **will void the warranty. The manufacturer cannot be held liable for damage to the hob or related damage arising from improper use.**



**10.2 Automatic radiant power distribution**


The maximum applicable power is distributed among the active radiant elements, **the last power level set takes priority over the previous settings on the other radiant elements.**

**Power is distributed automatically among the two radiant elements on the left (A) and the two on the right (B).**

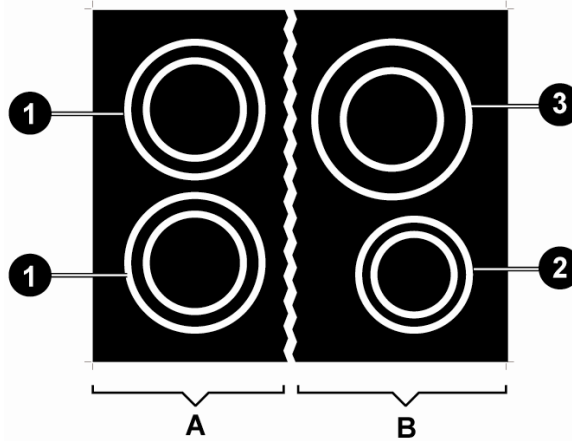

	A		B	
<b>RADIANT ELEMENT</b>	1		2	3
	Ø 180		Ø 145	Ø 210
<b>POWER (W)</b>	1850		1400	2300
<b>POWER WITH BOOSTER FUNCTION (W)</b> (ref. section "10.6.3")	3000		2200	3700
<b>TOTAL MAXIMUM POSSIBLE POWER (W)</b>	3700		3700	


**Power is distributed automatically among the three radiant elements on the left (A) and the two on the right (B).**

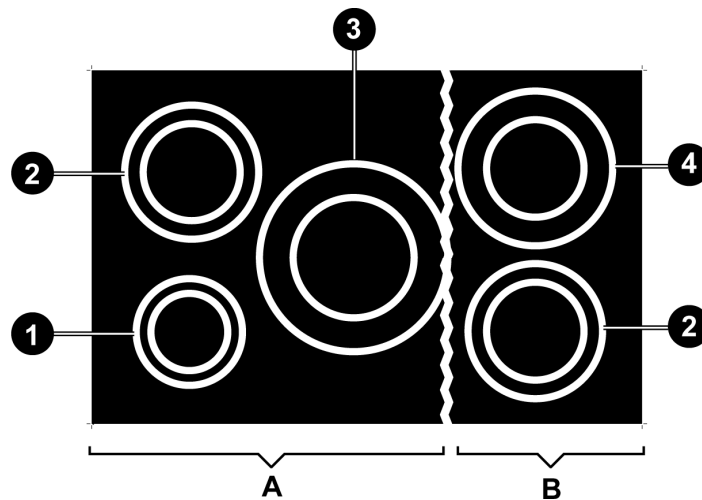

	A			B	
<b>RADIANT ELEMENT</b>	1	2	3	2	4
	Ø 145	Ø 180	Ø 260	Ø 180	Ø 210
<b>POWER (W)</b>	1400	1600	2400	1600	2300
<b>POWER WITH BOOSTER FUNCTION (W)</b> (ref. section "10.6.3")	1800	3000	3200	3000	3200
<b>TOTAL MAXIMUM POSSIBLE POWER (W)</b>	3700			3700	



Power is distributed automatically among the three radiant elements on the left (A) and the two on the right (B).

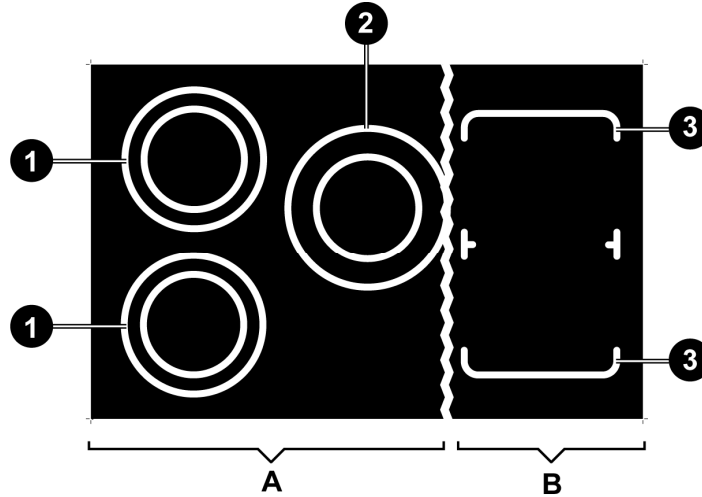

	A		B
<b>RADIANT ELEMENT</b>	1 Ø 200	2 Ø 230	3 □ 220
<b>POWER (W)</b>	1850	2300	2100
<b>POWER WITH BOOSTER FUNCTION (W)</b> (ref. section "10.6.3")	3000	3700	3700
<b>TOTAL MAXIMUM POSSIBLE POWER (W)</b>	3700		3700

SELECTED POWER LEVEL	1	2	3	4	5	6	7	8	9
% POWER SUPPLIED	3	6.5	11	15.5	19	31.5	45	64.5	100



**When using several radiant elements simultaneously**, the last activated element may maintain the set value to the detriment of the other previously set elements, which may then be affected by a **reduction in power**. On activating the last radiant element, the values on the displays of the previously set elements, will start to **flash**, automatically showing the new **lower** power level supplied. If the heating value of any of the radiant elements is **manually reduced**, the difference in power will be redistributed among the remaining elements.



*Given that cooking will continue with new, automatically reset power values, adjustments may need to be made depending on the type of food being cooked.*



## 10.3 Energy regulator table

The table below indicates the power levels that can be set and the type of food that can be cooked at each level. The values may vary depending on the quantity of food and personal taste.



Turn the knob to set the desired power value. Turn the knob to display the actual desired power level, whereas the one selected with the knob is only indicative.



 

1 – 2	For heating food, keeping small quantities of water on the boil, making egg- or butter-based sauces.
3 – 5	For cooking solid and liquid food, keeping water on the boil, defrosting frozen food, frying 2-3 eggs, cooking fruit and vegetables, general cooking.
6 – 8	Cooking meat, fish and vegetable stews, food with more or less water, making jams, etc.
9	Roasting meat or fish, steak, liver, browning meat or fish, eggs, etc.
P	Deep fat frying potatoes etc., bringing water rapidly to the boil.

## 10.4 Switching on the induction hob for the first time



Clean the hob with a damp cloth, and then dry the surface thoroughly. Do not use detergent which risks causing blue-tinted colour on the glass surface.

When the hob is first switched on the displays of all the radiant elements **light up simultaneously** displaying the symbols **8.** as shown in the figure; the displays will then switch off immediately without emitting any sound.

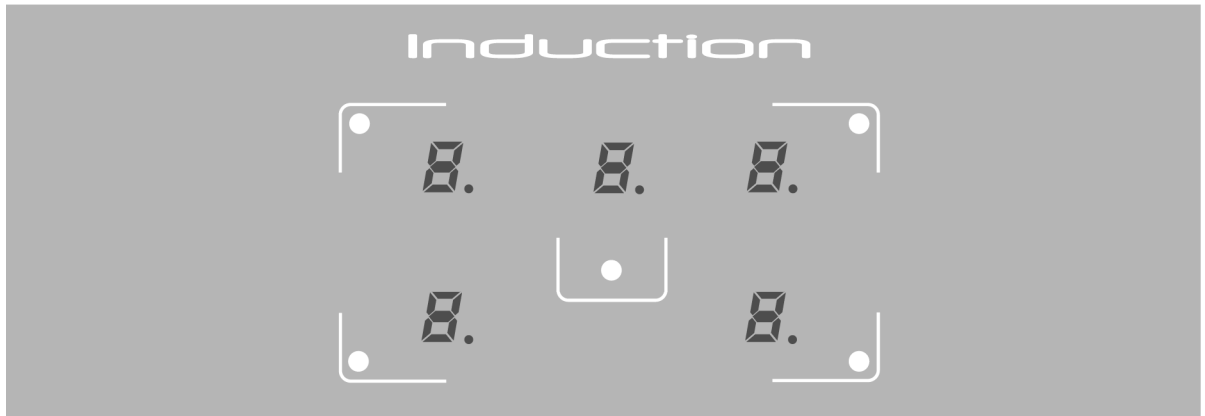


If one or more knobs is **not** in “0” position when the hob is first switched on, the relative displays light up as normal, but the radiant element **will not work**.

On turning the knob, the relative display will show the adjacent symbol, signalling the radiant element **failed to work**. The element will only work properly again once the knob is returned to “0” position and a new power value is set.



## 10.5 Pan recognition

 


An electronic sensor detects if a pan is **present** or **absent** on the radiant element. If the type of pan is **unsuitable** for magnetic induction cooking (see section "10.5.1") or if the pan is **too small** (see table "MINIMUM DIAMETER" on p. 47), the adjacent symbol is displayed.

If during cooking a pan is **removed** from the radiant element **without** having first returned the relative knob to "0" position, the power value, previously set and shown on the relative display, will be automatically **replaced** with the symbol

If the pan is **repositioned** correctly on the radiant element, the symbol switches off and cooking will resume normally; otherwise, **after 10 minutes**, the symbol will switch off, the knob will have to be returned to "0" position and a new power value set before the radiant element can be used again.

If a knob is turned to any position **before** placing a pan on the radiant element, the relative display shows the set power value and then immediately **replaces** it with the symbol (the radiant element stands by for **10 minutes**). If in the meantime a pan is placed correctly on the radiant element, cooking will begin; otherwise the radiant element does not activate and symbol switches off. To reactivate the radiant element, the relative knob must be returned to "0" position and a new power value set.

**Pan recognition limits:** the diameter of the pan base is signalled by a circumference or perimeter on the cooking zone.

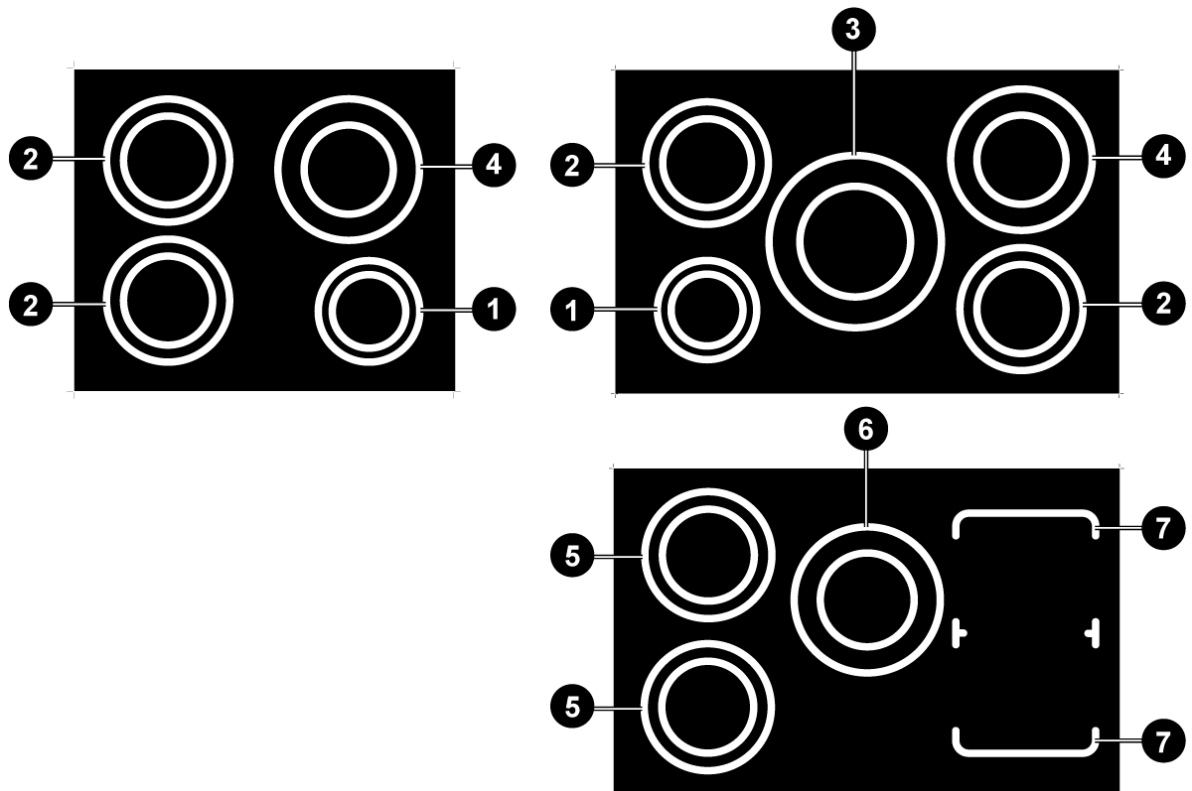

**MINIMUM  
DIAMETER  
(mm)**

	1 Ø 145	2 Ø 180	3 Ø 260	4 Ø 210	5 Ø 200	6 Ø 230	7 □ 220
	120	145	180	145	145	180	145



## 10.5.1 Pans suitable for induction cooking

Manufacturers generally state whether or not their cookware is suitable for induction cooking. The adjacent pictogram indicates the kind of symbol used to denote suitability for induction cooking, usually found on the bottom of the pan.

Only use pans with perfectly flat, smooth bases suitable for induction cooking.

The cookware used for induction cooking must be made of ferrous alloys or ferritic steel, be magnetisable and have a sufficiently thick base.

To check whether the pan is suitable, simply hold a magnet at its base: if it is attracted the pan is suitable for induction cooking. If you do not have a magnet, pour a little water into the pan, rest it on a cooking zone and turn on the hob.

Certain pans can make noise when they are placed on an induction cooking zone. This noise doesn't mean any failure on the appliance and doesn't influence the cooking operating.

SUITABLE COOKWARE	UNSUITABLE COOKWARE
<ul style="list-style-type: none"> <li>Enamelled ferritic steel cookware with thick base.</li> <li>Ferrous cast iron cookware with enamelled base.</li> <li>Multilayer stainless steel, stainless ferritic steel or aluminium cookware with special base for induction cooking.</li> </ul>	<ul style="list-style-type: none"> <li>Copper, stainless steel, aluminium, fireproof glass, wood, ceramic and terracotta.</li> </ul>

## 10.6 Switching on a radiant element



**Before activating a radiant element, place a suitable pan on the relative cooking circumference.**

On turning any knob **clockwise**, a **beep** is emitted and all the displays switch on; the one corresponding to the turned knob will show the selected power value, while the others will show the value **0**.

On turning a second knob, no beep is emitted and the display shows the power value set for that knob.

### 10.6.1 Changing the power level

Each knob has a graduated scale increasing **clockwise** from level "0" to level "9". The heating power of the radiant elements is **increased** by turning any knob **clockwise** from "0" position, and is **decreased** by turning the knob **anticlockwise** from the position reached.

The knob's default position corresponds to level "0" (value **0** on the relative display).



**Turn the knob to set the desired power value (see table in section "10.3"). Turn the knob to display the actual desired power level, whereas the one selected with the knob is only indicative.**


Turning knob **clockwise beyond power level "9"** will result in a click and an audible signal, which will enable the "Booster" function indicated on the display with the symbol **P**; **then** reposition the knob on level "9" (see paragraph "10.6.3").






### 10.6.2 Rapid heating function


This function enables the required power level to be reached more quickly, although it remains active for a very limited period of time.

Starting from "0" position, turn the knob **anticlockwise until it clicks** and hold it in that position for **2 seconds**; the display will light up showing the adjacent symbol. You will then have **10 seconds** to turn the knob to the required power level; the display will start flashing **alternating** symbol  with the new power level set with the knob.

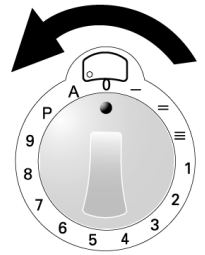



 The following table gives the rapid heating times to the various power levels.

SELECTED POWER LEVEL	1	2	3	4	5	6	7	8	9
DURATION IN SECONDS	48	144	230	312	408	120	168	216	-





### 10.6.3 Booster function

 
Turn the knob **clockwise beyond power level "9" until you hear a click** and an **audible signal** (the display shows the adjacent symbol); **then** reposition the knob on level "9".

The knob **must be correctly repositioned on level "9"**; otherwise the symbol , shown on the display, will be replaced by **error code**  which signals deactivation of the radiant element; to restore the radiant element, follow the instructions given in paragraph "10.6.10".

The maximum heating time with the Booster function is **10 minutes**.

At the end of the maximum heating time, symbol  **flashes** for a few seconds and the power is automatically reset, displaying the value .



With the Booster function activated, **several consecutive cycles** can be repeated.

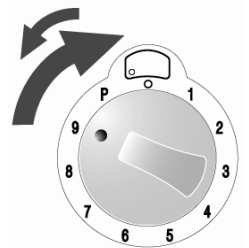

### 10.6.4 Food warming function (only available on certain models)


This function warms to **45°C** the bottom of a pan suitable for induction cooking (see section "10.5.1"), maintaining a **constant temperature of 42°C** inside the pan; it is useful for keeping previously cooked food warm inside the pan, thus optimising energy consumption. The maximum time for constant warming is limited to **120 minutes**.

 Turn the knob **clockwise between position "0" and power level "1"** (the corresponding display will show the adjacent symbol to indicate the function is active).

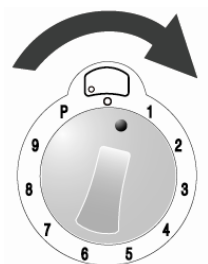




**10.6.5 Food warming function (only available on certain models)**

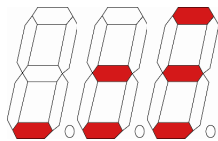

This function warms to **45°C** the bottom of a pan suitable for induction cooking (see section “10.5.1”), maintaining a **constant temperature** (\*) inside the pan; it is useful for keeping previously cooked food warm inside the pan, thus optimising energy consumption. The maximum time for constant warming is limited to **120 minutes**.


Turn the knob **clockwise between position “0” and power level “1”**.

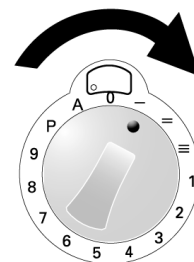

The corresponding display shows the adjacent symbol in **three phases** (heating power is automatically adjusted).


PHASE	1	2	3
(*) <b>CONSTANT TEMPERATURE</b>	42°C	70°C	94°C

**10.6.6 Bridge function (only available on certain models)**

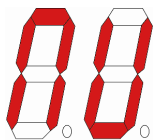


This function “bridges” the **two right-hand radiant elements** (front and back) into a **single cooking zone** controlled only by the **second knob on the right**.

The Booster function cannot be used when the Bridge function is active.

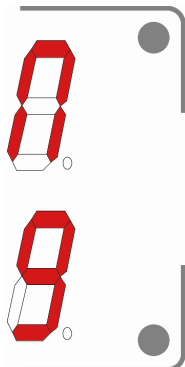

**Simultaneously turn the last two knobs on the right clockwise** (beyond power level “9” until they **click** and a **beep** is emitted) until **position “P”** and hold them in this position for at least **2 seconds** (the corresponding displays show the adjacent symbols signalling the function is active). Turn the **second knob on the right** to the desired power level.

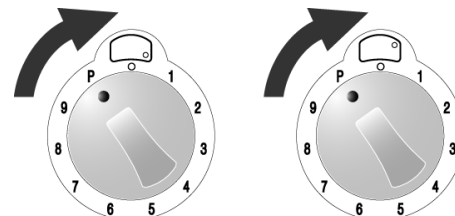

If a pan is **removed** from the radiant elements during cooking and not replaced **within 10 minutes**, the function **automatically deactivates**.

To **deactivate** the function manually, return the knobs to “0” position.

**10.6.7 Residual heat**



After cooking is finished and the knob is returned to “0” position, the radiant element's display shows the adjacent symbol **alternated** with the value **H**, indicating that that radiant element has just been used and is still hot.

The symbol **H** will **flash for a few seconds**, then will become **steady** and will stay on until the glass temperature has gone below the safety level.

**10.6.8 Ventilation**

The cooling system is fully **automatic**. The cooling fan starts with a **low speed** when the calories brought out by the electronic system reach a certain level. The ventilation starts his **high speed** when the hob is intensively used. The cooling fan reduces his speed and stops **automatically** when the electronic circuit is cooled enough.




## 10.6.9 Overheating

The induction hob is fitted with a **safety device** that protects the internal electronics against overheating. This device requires no attention from the user and enables the hob to be used confidently without the risk of overheating.

## 10.6.10 Deactivating a single radiant element

On turning any knob **anticlockwise** and keeping it in that position for **more than 30 seconds**, the relative display will show the adjacent symbol to indicate the radiant element is deactivated.



**If the knob is not positioned correctly**, the relative display will show **error code**  which signals deactivation of the radiant element. **It is not necessary to call Customer Service**; to restore the radiant element, simply return the knob to position "0" and reset the required power value.



This function is advisable to disable a single radiant element **if it is faulty or malfunctioning**.

**After the radiant element has been repaired** by the authorised Technical Support Service, it can be reactivated by turning the knob **anticlockwise** again and keeping it in that position for **more than 30 seconds**.

## 10.7 Automatic switch-off

An **automatic counter** counts the time elapsing since the last power variation. This determines the maximum heating duration, which varies according to the power level selected.

 
**If a radiant element is left on by mistake** (with a correctly positioned pan), it will **switch off automatically** once the **maximum** heating duration for the selected power is reached.

SELECTED POWER LEVEL	1	2	3	4	5	6	7	8	9	P
MAX TIME IN MINUTES	360	360	300	300	240	90	90	90	90	10





## 10.8 Switching off manually

Turn all the knobs to "0" position. Each display will show a **flashing dot** as in the adjacent figure; after **15 seconds** all the displays will switch off, a **beep** will be emitted and the appliance will go to stand-by.




## 10.9 Child safety

The radiant elements can be **deactivated**. Turn the **first two knobs on the left anticlockwise simultaneously** and keep them in this position for at least **2 seconds**, until all the displays show symbol .

After a **few minutes** the symbols  switch off, but the radiant elements **will not activate** and the above-mentioned lock symbols appear on all displays if any knob is turned.

The deactivation has no time limit. A prolonged power failure may **cancel** this deactivation.

To **reactivate** the radiant elements, turn **the first two knobs on the left anticlockwise simultaneously**.

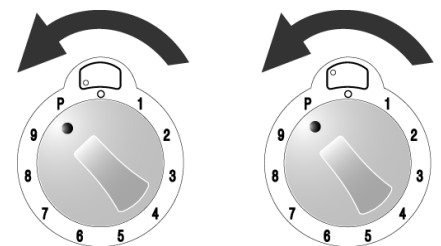



## 10.10 In the event of faults and failures



**If a defect is noticed**, switch off the appliance and turn off the electrical supplying.

**Do not attempt to use a faulty radiant element until it is repaired by the authorised Technical Support Service.**




**Any repairs must be carried out exclusively by qualified personnel. Do not open the appliance for any reason.**

**If the glass surface is damaged**, switch off the appliance immediately to prevent the risk of electric shocks and contact the Technical Support Service.

**If a radiant element is faulty**, the remaining elements can still be used normally.

To clear the error **code** from the displays, set all the knobs to “0” position and set new power values.

The following list includes the most frequent **failures**, the causes of which can be removed by the user or via the Technical Support Service.

FAULT	CAUSE	REMEDY
<b>The hob or the cooking zones do not switch on.</b>	The appliance is not correctly connected to the mains.	Reconnect the appliance to the mains.
	The hob lock function has been activated.	Deactivate the lock by following the instructions in section 10.9
 <b>The display shows the adjacent symbol.</b>	There is no pan on the cooking zone.	Correctly position a suitable pan by following the instructions in section 10.5
	The pan is not suitable for magnetic induction cooking.	Replace the pan with a suitable one, as indicated in section 10.5
	The diameter of the base of the pan is too small for the cooking zone.	Replace the pan with a suitable one, as indicated in section 10.5
 <b>The display shows the adjacent symbol.</b>	The knob is not positioned correctly.	<b>It is not necessary to call Customer Service;</b> to restore the radiant element, simply return the knob to position “0” and reset the required power value.
 <b>The display shows the adjacent <u>code</u> alternated with <u>numbers or letters</u>.</b>		Contact <b>Customer Service</b> and give the <u>code</u> shown on the display.
<b>The hob or a cooking zone switches off.</b>	The safety device has triggered. The device triggers when a cooking zone is left on by mistake.	Return the relative knob to “0” position.
	An empty pan has overheated.	Remove the empty pan from the cooking zone.
<b>The cooling fan stays on after the hob is switched off.</b>	This is not a fault.	The fan stays on until the hob has cooled down. The fan will switch off <b>automatically</b> .



## 11. Using the ovens

### 11.1 General warnings



When the oven or grill is operating, the outer walls and oven door can become very hot.

**Keep children away from the appliance.**

**Do not allow children to sit on the oven door or play with it.**

**Do not use the door as a stool.**

**Never stand aluminium pots or foil on the base of the oven, as this may seriously damage the oven enamel.**

**Do not** cook food on the bottom of the oven.

When using the oven for the first time, or after a power cut, the display flashes regularly indicating **0:00**. To set the display, refer to section "SETTING THE TIME" on page 33.

Do not attempt to disassemble the oven door without **consulting the relative instructions carefully** (refer to section "14.1 Removing the oven door"): **the hinges on the oven door may injure the hands.**



#### **HEATING BLOCK OF THE OVEN**


If during normal operation the oven interrupts heating and the programmer display begins to flash and goes to zero, check whether:

- there has been a current interruption.

If the block occurs again after the cooking programme has been restarted, this means that the safety device has been tripped. This device intervenes in the event of a thermostat fault and prevents oven overheating. In such case, we recommend that you not try to light the oven again and that you contact your nearest service centre.

### 11.2 Drawer and storage compartment


In some models a storage drawer is provided on the lower part of the cooker beneath the oven or in the next side compartment. Use this cabinets only to store metal cooker accessories.

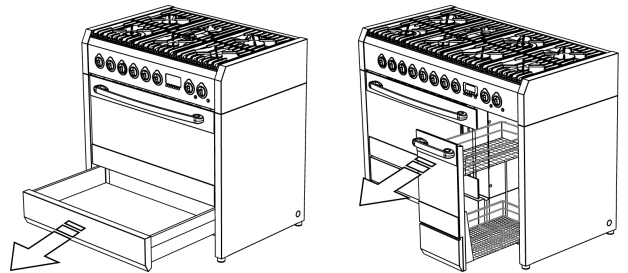

#### **"Push-pull" drawer (if envisaged)**

To use the "push-pull" mechanism, **simultaneously push at the exact points indicated by the labels (see 1)** and then **pull out** the drawer (see 2).

The drawer is designed for storing metal cooker accessories only.

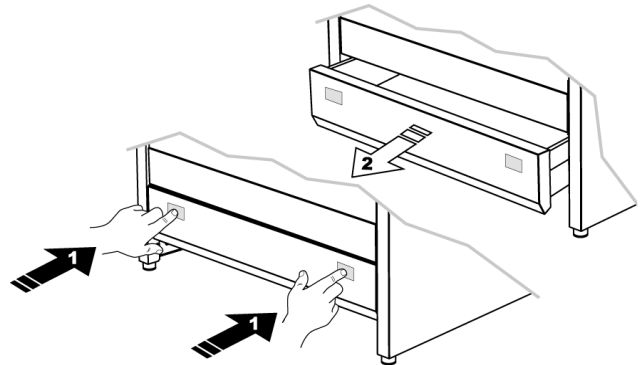

The drawer becomes hot while the oven is in use; **avoid contact with the internal parts to prevent scalding.**

**Do not store inflammable material such as cloths, paper or similar in the drawer and storage compartment.**



## 11.3 Risk of condensation



- Some cooking with **high water content** combined with the use of certain functions can cause the **formation of condensation on the door's inner glass**. To prevent this occurring, **open the oven door for a few seconds once or twice while cooking**.
- **Do not leave food to cool in the oven** after cooking to prevent **condensation forming on the door's inner glass**, which may drip out of the oven when the door is opened.

## 11.4 Using the electric multifunction oven




The end of cooking display and the control knobs on the main oven **have no bearing** on the operation of the auxiliary oven.




### 11.4.1 Switching on the oven for the first time

The first time it is used, the oven may smoke or give off an acrid smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. **Before putting food in the oven, heat to the maximum temperature for 30-40 minutes with the door closed and wait until the smoke or odour has stopped.**

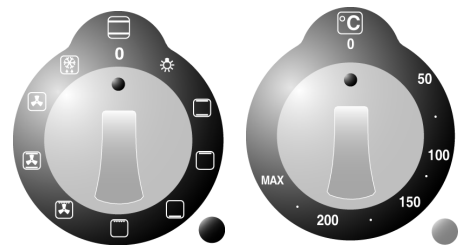

To prevent any steam in the oven from scalding, proceed as follows: turn the function switch knob to "0", or to function ; open the door in two stages: hold it partly open (**approx. 5 cm**) for 4-5 seconds, then open it completely.

Should you need to adjust the food, leave the door open for as short a time as possible to prevent the temperature inside the oven from lowering to such an extent as to jeopardise cooking.

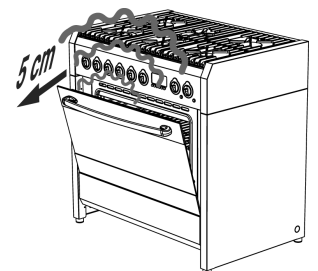

### 11.4.2 Traditional cooking

Turn the function switch knob to position and the thermostat knob in correspondence with the required temperature value. For differentiated heating over or below the food, set the function selector switch to position (hot above) or (hot below). For more uniform heating throughout the oven, turn the function switch knob to position .



**The oven is equipped with an automatic cooling system regulated by the temperature of the door.** When the limit temperature is reached, the cooling fan automatically activates and then deactivates when the temperature of the door **goes below the preset limit**. The cooling fan may stay on after the oven has turned off.


**In case that does not happen, switch off the appliance and contact the Technical Service immediately.**

### 11.4.3 Convection cooking


Turn the function switch knob to position ; turn the thermostat knob in correspondence with the required temperature value.



## 11.4.4 Cooking with the ventilated grill (with closed door)


Turn the function switch knob to position ; turn the thermostat knob in correspondence with the maximum temperature value (**MAX**).


## 11.4.5 Cooking with the grill + roasting spit (with closed door)

Turn the function switch knob to position ; turn the thermostat knob in correspondence with the maximum temperature value (**MAX**). The grill and spit operate at the same time, allowing for cooking on the spit.


## 11.4.6 Cooking with the roasting spit (with closed door)

If your oven model has a roasting spit, proceed as follows:

- Slide the meat to be cooked on the spit rod **A** and secure it with the adjustable forks.
- Hang the hook **B** at the top of the oven as shown in the figure.
- Place the spit rod **A** into the hole **C** in the oven casing; before closing the oven door, make sure that the rod **A** is correctly inserted into the hole **C** (insert the rod and turn it slightly back and forth).
- Hang the other end of the spit rod to the hook **B** (the pulley of the rod **A** is situated on the handle of the hook **B**).
- Close the oven door and activate the spit by turning the function selector knob to the  position.
- When cooking is completed, open the oven door and remove the spit rod using the plastic handle **D**, which is screwed into the base of the rod **A**.

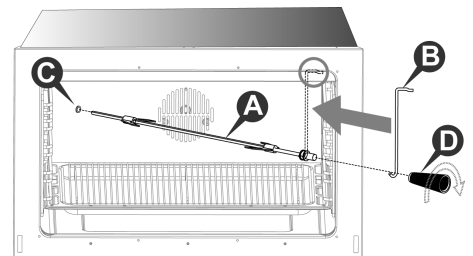

## 11.4.7 Defrosting

Turn the function switch knob to position , turn the thermostat knob to position "**0**": in this way the motor fan is activated, which moves the air inside the oven and encourages frozen food to defrost.

## 11.4.8 Switching off the oven


The oven is switched off by returning the thermostat knob to position "**0**".




## 11.5 Using the multifunction and combination steam oven

### 11.5.1 Switching on the oven for the first time

The first time it is used, the oven may smoke or give off an acrid smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. **Before putting food in the oven, heat to the maximum temperature for 30 minutes with the door closed and wait until the smoke or odour has stopped.**

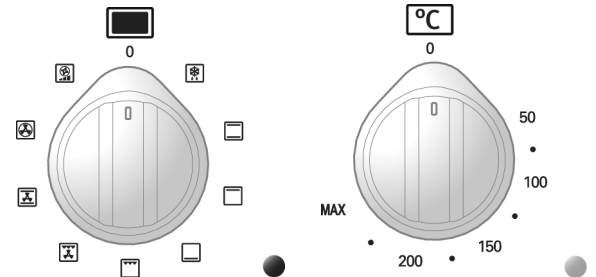

 

 

### 11.5.2 Rapid heating

Turn the function selector knob to  to **rapidly preheat** the oven; with this function the oven will rapidly reach the selected temperature. When the temperature is reached, select the required cooking function.



**The rapid heating function  must not be used for cooking.**


### 11.5.3 Traditional cooking

Turn the function switch knob to position  and the thermostat knob in correspondence with the required temperature value. For differentiated heating over or below the food, set the function selector switch to position  (hot above) or  (hot below). For more uniform heating throughout the oven, turn the function switch knob to position .



**The oven is equipped with an automatic cooling system regulated by the temperature of the door.** When the limit temperature is reached, the cooling fan automatically activates and then deactivates when the temperature of the door **goes below the preset limit**. The cooling fan may stay on after the oven has turned off.

### 11.5.4 Convection cooking

Turn the function switch knob to position ; turn the thermostat knob in correspondence with the required temperature value.








## 11.5.5 Steam cooking



**The steam generator becomes very hot: pour mineral or decalcified water only into the tank; never use substances containing alcohol or detergents.**


- Pour the required quantity of **water** (see tables on pages 66 and 67), into the steam generator tank, using the **measuring jug** as shown in the figure;
- turn the functions knob to  or  and set the required temperature, which must be **above 100°C**.

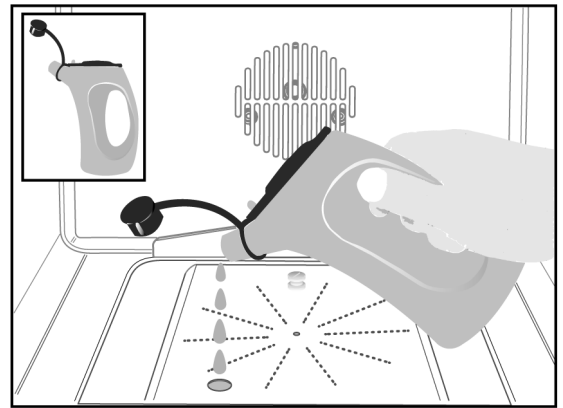


*Steam cooking fills the inside of the oven with dry steam. This distributes heat more correctly and evenly, giving better results than cooking without steam and preserving more of the food's original flavour.*

*The  function enables cooking **on only one level** of the oven, while the  function enables simultaneous cooking **on more levels**.*

## 11.5.6 Cooking with the ventilated grill (with closed door)

Turn the function switch knob to position ; turn the thermostat knob in correspondence with the maximum temperature value (**MAX**).


## 11.5.7 Cooking with the grill and roasting spit (with closed door)


Turn the function switch knob to position ; turn the thermostat knob in correspondence with the maximum temperature value (**MAX**). The grill and spit operate at the same time, allowing for cooking on the spit.




### 11.5.8 Cooking with the roasting spit (with closed door)

Proceed as follows:

- Slide the meat to be cooked on the spit rod **A** and secure it with the adjustable forks.
- Hang the hook **B** at the top of the oven as shown in the figure.
- Place the spit rod **A** into the hole **C** in the oven casing; before closing the oven door, make sure that the rod **A** is correctly inserted into the hole **C** (insert the rod and turn it slightly back and forth).
- Hang the other end of the spit rod to the hook **B** (the pulley of the rod **A** is situated on the handle of the hook **B**).
- Close the oven door and activate the spit by turning the function selector knob to the  position.
- When cooking is completed, open the oven door and remove the spit rod using the plastic handle **D**, which is screwed into the base of the rod **A**.

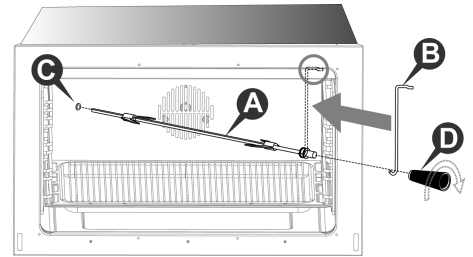

### 11.5.9 Defrosting

Turn the function switch knob to position , turn the thermostat knob to position "0": in this way the motor fan is activated, which moves the air inside the oven and encourages frozen food to defrost.

### 11.5.10 Switching off the oven

The oven is switched off by returning the thermostat knob to position "0".



## 11.6 Using the auxiliary oven with natural convection




The end of cooking display and the control knobs on the main oven **have no bearing** on the operation of the auxiliary oven.



The auxiliary oven with natural convection is equipped with:


- a heating element positioned on the base of the oven (at the bottom);
- a heating element positioned on the ceiling of the oven (at the top) + grill.

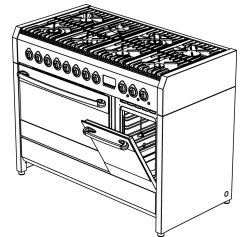


### 11.6.1 Switching on the auxiliary oven for the first time

The first time it is used, the auxiliary oven may smoke or give off an acrid smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. **Before putting food in the oven, heat the auxiliary oven to the maximum temperature for 30-40 minutes with the door closed and wait until the smoke or odour has stopped.**

To start heating the auxiliary oven, select the temperature (from **60** to **MAX**) or the required function by turning the thermostat knob.

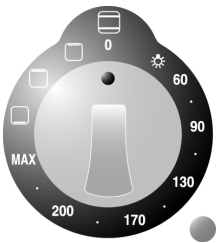


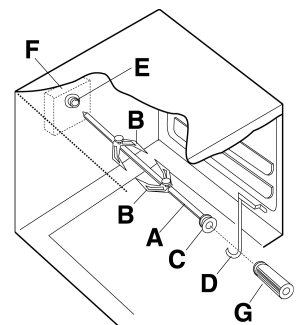
### 11.6.2 Cooking with the grill (with closed door)

Turn the thermostat knob to position  and let the auxiliary oven preheat for approximately 5 minutes. For correct operations, position the grill shelf on the third guide from the bottom. It is however possible to vary the position of the grill shelf according to personal taste and different cooking requirements. Before putting food in the oven, allow it to preheat for 5 minutes. A cooling system prevents the control knobs from overheating.

### 11.6.3 Cooking with the spit (with closed door)

If your oven model has a roasting spit, proceed as follows:

- turn the thermostat knob to position  and let the auxiliary oven preheat for approximately 5 minutes;
- insert the food on to the spit rod **A** taking care to hold it firm with the two forks **B**, and balancing it so as to avoid straining the gearmotor;
- place the pulley **C** of the spit rod onto the support **D** after introducing the opposite end into the hole **E**, until the coupling with the gearmotor **F** so that the rod rotates;
- pour a little water into the dripping pan and position it under the spit rod;
- monitor the cooking from time to time and check the spit rod is rotating correctly;
- at the end of the cooking, switch off the auxiliary oven by returning the thermostat knob to position "0";
- remove the spit rod from the auxiliary oven using the knob **G** and wearing an oven glove.



### 11.6.4 Switching off the auxiliary oven

The oven is switched off by returning the thermostat knob to position "0".




## 11.7 Using the convection electric oven




The end of cooking display and the control knob on the convection oven **have no bearing** on the operation of the grill oven.



The convection oven is equipped with a circular heating element with a fan located on the rear wall of the oven.

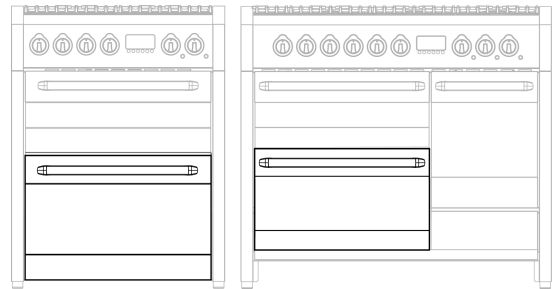


### 11.7.1 Switching on the oven for the first time

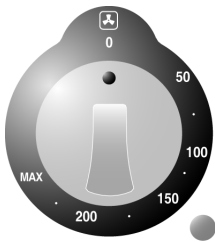

The first time it is used, the oven may smoke or give off an acrid smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. **Before putting food in the oven, heat to the maximum temperature for 30-40 minutes with the door closed and wait until the smoke or odour has stopped.**



To prevent any steam in the oven from scalding, proceed as follows: turn the knob to "0"; open the door in two stages: hold it partly open (**approx. 5 cm**) for 4-5 seconds, then open it completely. Should you need to adjust the food, leave the door open for as short a time as possible to prevent the temperature inside the oven from lowering to such an extent as to jeopardise cooking.

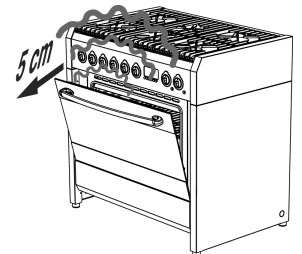

### 11.7.2 Cooking with convection oven

Turn the knob in correspondence with the required temperature value. It is possible to vary the position of the grill shelf according to personal taste and different cooking requirements.

### 11.7.3 Switching off the oven

The oven is switched off by returning the knob to position "0".



## 11.8 Using the grill oven with natural convection




The grill oven knob do **not influence** the functioning of the convection oven.



The grill oven with natural convection is equipped with:


- a heating element positioned on the base of the oven (at the bottom);
- a heating element positioned on the ceiling of the oven (at the top) + grill.

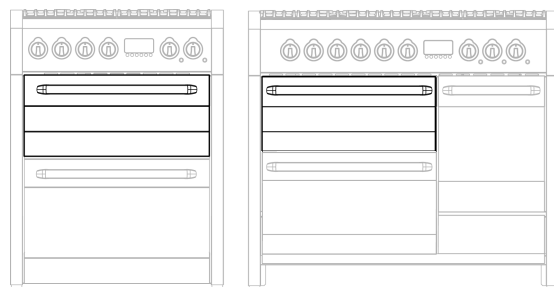

### 11.8.1 Switching on the grill oven for the first time

The first time it is used, the grill oven may smoke or give off an acrid smell caused by oily residue from manufacturing that may give unpleasant odours or flavours to food. **Before putting food in the oven, heat the grill oven to the maximum temperature for 30-40 minutes with the door closed and wait until the smoke or odour has stopped.**

It is possible to switch on the heating of the grill oven by turning the knob to the required temperature (from 50°C to MAX) or function.

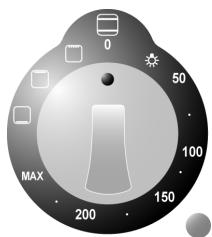

### 11.8.2 Cooking with the grill (with closed door)

Turn the knob to position and let the grill oven preheat for approximately 5 minutes. For correct operations, position the grill shelf on the second guide from the bottom. It is possible to vary the position of the grill shelf according to personal taste and different cooking requirements. A cooling system prevents the control knob from overheating.

### 11.8.3 Traditional cooking

Turn the knob to the required temperature and place the food to be cooked at the required level (**avoid placing the food right at the bottom**); in this way the food will be cooked from the top and bottom by the two heating elements.

For differentiated heating over or below the food, set the function selector switch to position (hot above) or (hot below).


### 11.8.4 Switching off the grill oven

The oven is switched off by returning the knob to position "0".



## 12. Cooking suggestions

### 12.1 Suggestions for using the hob burners correctly

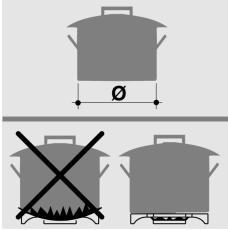

The diameter of the base of cooking recipients should fit the diameter of the burner used (see adjacent table). The burner flame must never be wider than the diameter of the recipient. Use recipients with a flat base. Where possible use pots with a lid, as this allows less power to be used. To reduce cooking times for vegetables, potatoes, etc., use little water.

Burner	Recipient diameter (in cm)
Rapid	from 24 to 26
Semi rapid	from 16 to 22
Auxiliary	from 8 to 14
Triple-ring / Wok	from 24 to 26
Mega Wok	from 24 to 26
Fish kettle	from 16 to 35

### 12.2 Suggestions for using the fry-top / steak grill correctly

The **fry-top** griddle is smooth, whereas the **steak grill** is lined and can be used to obtain the typical rhomboidal pattern together with the delicious flavour of barbecue cooking.

Foods cooked on the fry-top/steak grill have a special taste that does not require the excessive use of spices. It is possible to cook in different ways. For example, different foods, such as meat and fish, can be cooked at the same time. Before cooking meat, we recommend treating it with flavoured oil or marinating it for a few hours.

A little tip: meat should always be salted after cooking on the griddle, so that its juices do not come out prematurely.


### 12.3 Suggestions for using the volcanic rock grill correctly

Cooking food on the cast iron grill creates a considerable quantity of smoke. Sometimes, while cooking very fatty meat, small flames may appear similar to those seen during barbecue cooking (see section 8.2 for how to solve this problem). Before placing fish on the grill, we recommend greasing it slightly with oil or melted butter. This will stop the fish sticking to the surface of the grill.



*The appliance can also be used in the same way as an “open burner”, which is ideal for simmering. Only use multi-function pans whose dimensions are compatible with the cooking surface of the cast iron grill. This type of cooking is ideal for: beef stews, grilled pork, blanquette, rabbit with beer, tongue (see instructions in section 8.2).*

### 12.4 Suggestions for using the vitroceramic hob correctly

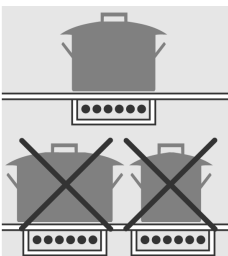

In order to obtain good efficiency and adequate energy consumption, it is essential to use only recipients that are suitable for electric cooking. The diameter of the base of the recipient must be the same as the diameter of the outline of the cooking area. Energy is wasted if they do not correspond.

The base of the recipient must be very thick and perfectly flat. It should also be clean and dry, as should the glass on the hob.

Do not use cast iron pots or pots with a rough base, as they may scratch the surface.

When using the vitroceramic hob, it must be thoroughly cleaned before switching on the heating elements.

The glass may be scratched if pans are placed on abrasive residues. Any scratches do not however jeopardise the cooking procedure.


The ideal thickness for the base of the pans is:

- **2-3 mm** in enamelled steel;
- **4-6 mm** in stainless steel with double base.

Before cooking food with a high sugar content (e.g. jam), apply a protective product to the cooking surface to prevent it from being damaged if the food spits or boils over.



## 12.5 Suggestions for using the induction hob correctly

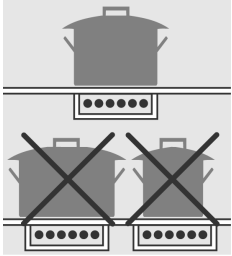

For best cooking results and energy saving, only use cookware suitable for induction cooking. The diameter of the base of the cookware must be the same as the diameter of the circle on the cooking zone (section “10.5”); if they do not match energy will be wasted. The base of the cookware must be ferrous alloy or ferritic steel and perfectly flat. It must also be perfectly clean and dry, as must the glass in the cooking zone. Do not use pans with a rough, scratched or damaged base, as they may scratch the hob surface.



*Sugar, synthetic materials or aluminium sheets must not contact with the heating zones. These may cause breaks or other alterations of the glass ceramic surface by cooling. Before cooking sugary foods, it is advisable to treat the glass ceramic surface with a specific silicone-based product to protect the hob surface from any burned-on food residue.*

*Do not put or leave empty saucepans on the vitroceramic hob.*

*Avoid dropping objects, even little ones, on the vitroceramic hob.*

*Sand or other abrasive materials may damage the ceramic glass.*

*The glass may be scratched if pans are placed on top of abrasive residue. Scratches do not, however, affect the operation of induction cooking.*

*Make sure the appliance fan is working correctly.*

## 12.6 Suggestions for using the oven correctly



*The oven allows to optimise cooking. It is possible to cook traditionally, with convection and with the grill.*

***The oven door should be completely closed for all types of cooking.***



### 12.6.1 Traditional cooking

With this type of cooking, the heat comes from the top and the bottom. It is therefore preferable to use the central guides. If the cooking requires a hotter temperature from the bottom or from the top, use the lower or upper guides. Traditional cooking is recommended for all food that requires high cooking temperatures, or long braising times. This system is also recommended when cooking with recipients made of terracotta, porcelain and similar materials.



### 12.6.2 Convection cooking

With this type of cooking, the food is heated by preheated air that is circulated in the oven thanks to a fan located on the rear wall of the oven. Heat rapidly and evenly reaches all parts of the oven, thus enabling different food to be cooked at the same time on different shelves. Humidity is eliminated from the air and the drier area prevents odours and flavours from being spread and mixed.

The possibility of cooking on more than one shelf allows you to cook many different dishes at the same time. Biscuits and mini pizzas can be cooked in three different baking tins. The oven, however, can also be used for cooking on a single shelf. The lower shelves can be used so that it is easier to monitor cooking.

Convection cooking is particularly convenient for bringing frozen food rapidly back to room temperature, for sterilising preserves or home-made fruit in syrup and, finally, for drying mushrooms or fruit.



### 12.6.3 Cooking with the grill

The heat comes from the top. Almost all meat can be grilled, with the exception of lean game and dishes such as meat-loaf. Meat and fish to be grilled should be lightly drizzled with oil and placed on the grid bars, which should be placed in the guides closest to or farthest away from the grill element, depending on the thickness of the meat, so as to avoid burning the surface and cooking too little inside.

**Suitable for:** relatively thin meat; toasted sandwiches.



*Position the grill pan on the **lowest level** to collect the juices and fat; pour one glass of water into the grill pan to **prevent smoke forming** due to fat overheating.*



### 12.6.4 Cooking with the ventilated grill

Using the combination of grill and fan.

This type of cooking allows the heat to penetrate gradually inside the food, even though the surface is directly exposed to the grill.

**Suitable for:** thicker meat; game-birds.



### 12.6.5 Steam cooking

Cooking in a steam-filled environment has considerable advantages over traditional cooking. It preserves the flavour by drastically reducing the evaporation of liquid, thus maintaining the organoleptic and nutritional qualities. It facilitates heat distribution, resulting in more even cooking and reduces cooking times, thus saving energy.

The steam cooking function can be used at low temperatures (**100°C**), to gently cook fish and vegetables, and at higher temperatures to cook desserts and other dishes when wishing to preserve their delicate flavour.



### 12.6.6 Fan assisted steam cooking

Fan assisted steam cooking has all the aforementioned advantages of traditional steam cooking, with the added advantage of perfect ventilation which ensures even heat distribution and therefore enables different foods to be cooked simultaneously at **different cooking levels**.

Fan assisted steam cooking is particularly recommended for large or delicate cuts of meat.

### 12.6.7 Cooking meat and fish

Meat to be cooked in the oven should weigh at least **1 kg**. Very tender red meat to be cooked rare (roast beef, fillet, etc.), or which should be well cooked on the outside and preserve all its juices on the inside, require cooking on high temperatures for a short time (**200-250°C**). White meat, game-birds and fish require cooking on low temperatures (**150-175°C**).

The ingredients for the sauce should only be placed in the baking tin if the cooking time is short, otherwise, they should be added in the last half hour. Meat can be placed on an ovenproof plate or directly on the grid bars, below which the dripping pan should be placed to collect the juice. Press the meat with a spoon to check if it is done. If it is firm, it is cooked.

At the end of the cooking, wait at least **15 minutes** before cutting the meat so as not to lose the juices. Before serving, plates can be warmed in the oven at minimum temperature.

### 12.6.8 Baking

Beaten mixtures must stick to the spoon because excess fluidity would prolong the cooking time. Sweets require moderate temperatures (generally between **150-200°C**) and require preheating (**approximately 10 minutes**). The oven door must not be opened until at least  $\frac{3}{4}$  of the way through the cooking time.





## 12.6.9 Recommended cooking tables

Cooking times vary according to the nature, homogeneity and volume of the food. We recommend monitoring your first attempts and checking the results, as similar results are obtained by cooking the same dishes in the same conditions. The following three tables (I, II and III) provide guidelines.

**TABLE OF CONVECTION AND TRADITIONAL COOKING TIMES (I)**

TYPE OF COOKING	QUANTITY KG.	POSITION OF GUIDE FROM BOTTOM		TEMPERATURE °C		TIME IN MINUTES
		CONVECTION 	TRADITIONAL 	CONVECTION 	TRADITIONAL 	
<b>BAKING</b>						
WITH BEATEN MIXTURE, IN A TIN	1	1-3	2	175	200	60
WITH BEATEN MIXTURE, ON THE DRIPPING PAN	1	1-3	2	175	200	50
SHORT PASTRY, PIE BASE	0.5	1-3	3	175	200	30
SHORT PASTRY WITH MOIST FILLING	1.5	1-3	2	175	200	70
SHORT PASTRY WITH DRY FILLING	1	1-3	2	175	200	45
MIXTURE WITH NATURAL LEAVENING	1	1-3	1	175	200	50
SMALL CAKES	0.5	1-3	3	160	175	30
<b>MEAT</b>						
VEAL	1	2	2	180	200	60
BEEF	1	2	2	180	200	70
ENGLISH STYLE ROAST BEEF	1	2	2	220	220	50
PORK	1	2	2	180	200	70
CHICKEN	1-1.5	2	2	200	200	70
<b>STEWES</b>						
BEEF STEW	1	1	2	175	200	120
VEAL STEW	1	1	2	175	200	110
<b>FISH</b>						
FILLET, STEAK, COD, HAKE, SOLE	1	1-3	2	180	180	30
MACKEREL, TURBOT, SALMON	1	1-3	2	180	180	45
OYSTERS	1	1-3	2	180	180	20
<b>TIMBALE</b>						
PASTA TIMBALE	2	1-3	2	185	200	60
VEGETABLE TIMBALE	2	1-3	2	185	200	50
SWEET AND SAVOURY SOUFFLÉS	0.75	1-3	2	180	200	50
PIZZA AND CALZONE	0.5	1-3	2	200	220	30

- The times refer to cooking on one shelf only; for more than one shelf increase the time by **5-10'**.
- The cooking times do not include preheating which takes **approximately 15'**.
- When cooking on more than one shelf, the guides are given in the preferential position.
- For beef, veal, pork and turkey roasts, either with bone or rolled, increase the time by **20'**.

**TABLE OF COOKING TIMES WITH GRILL AND VENTILATED GRILL (II)**

<b>TRADITIONAL GRILLING</b>				
TYPE OF COOKING	QUANTITY KG.	POSITION OF GUIDE FROM BOTTOM	TEMPERATURE °C	TIME IN MINUTES
CHICKEN	1-1.5	3	MAX	30 PER SIDE
TOASTED SANDWICHES	0.5	4	MAX	5 PER SIDE
SAUSAGES	0.5	4	MAX	10 PER SIDE
PORK CHOPS	0.5	4	MAX	8 PER SIDE
FISH	0.5	4	MAX	8 PER SIDE
<b>GRILLING WITH VENTILATED GRILL</b>				
TYPE OF COOKING	QUANTITY KG.	POSITION OF GUIDE FROM BOTTOM	TEMPERATURE °C	TIME IN MINUTES
ROAST PORK	1.5	2	170	180
ROAST BEEF	1.5	3	220	60
CHICKEN	1.2	2	190	90

- The dripping pan for collecting cooking juices should always be positioned in the **1<sup>st</sup> guide from the bottom**.



**TABLE OF DEFROSTING TIMES (III)**

<b>DEFROSTING</b>			
TYPE OF FOOD	QUANTITY KG.	POSITION OF GUIDE FROM BOTTOM	TIME IN MINUTES
READY-TO-EAT DISHES	1	2	45
MEAT	0.5	2	50
MEAT	0.75	2	70
MEAT	1	2	110

- Defrosting at room temperature has the advantage of not modifying the flavour and appearance of food.


 
## KEY

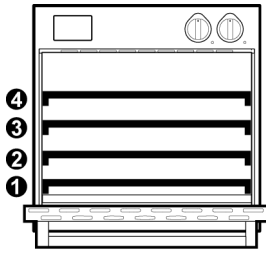

Level (\*)

Temperature

Cooking duration (minutes)


Quantity of water (litre) (\*\*)



## FAN ASSISTED STEAM COOKING

 TYPES OF FOOD

STAGE



TYPES OF FOOD	STAGE		Temperature	Cooking duration (minutes)	Quantity of water (litre) (**)
<b>PORK</b>					
SAVOURY TART (1.5 kg)	1	2	100	25 - 25	0.4 L
	2	2	170	60 - 75	-
PORK SHOULDER CASSEROLE (1.5 kg)	-	2	160	100 - 120	0.5 L
PORK SHOULDER CASSEROLE (2.5 kg)	-	2	160	130 - 150	0.5 L
SHIN OF PORK	1	2	100	40 - 50	0.5 L
	2	2	160	40 - 50	0.5 L
PORK ENTRECOTE	-	2	180 - 190	130 - 150	0.4 L
<b>UNSTUFFED POULTRY</b>					
CHICKEN PIECES	-	2	190 - 210	25 - 45	0.5 L
WHOLE CHICKEN (1 kg)	1	2	170 - 180	20 - 25	0.5 L
	2	2	190 - 200	35 - 40	-
WHOLE DUCK (2 - 3 kg)	1	2	150 - 160	70 - 90	0.5 L
	2	2	180	30 - 40	-
WHOLE GOOSE (3 - 4 kg)	1	2	150	110 - 120	0.5 L
	2	2	180	20 - 30	-
<b>FISH</b>					
FISH PIE	-	2	180	30 - 40	0.3 L
LARGE FISH (UP TO 300 g)	-	2	160 - 170	20 - 30	0.3 L
FISH FILLETS	-	2	150 - 160	15 - 25	0.2 L
WHOLE FISH (UP TO 1000 g)	-	2	160 - 170	40 - 50	0.5 L

 



(\*) corresponds to the position of the grill or tray from the **bottom**.

(\*\*) see instructions in section "11.5.5" page 57.

- The **values indicated in the table** refer to the preparation of food just out of the fridge and placed in a cold, non-preheated oven, unless indicated otherwise.
- In addition to the indications provided, **also remember** at the end of cooking or when checking on your baking, open the oven slightly and wait until all the steam has come out. This prevents quantities of steam escaping all in one go with the risk of scalding.



## STATIC STEAM COOKING

TYPES OF FOOD	STAGE	 (*)	 °C	 min	 (**)
<b>DESSERTS</b>					
POUND CAKE (6 EGGS)	-	2	150 - 160	30 - 40	0.3 L
POUND CAKE (3 EGGS)	-	2	150 - 160	25 - 35	0.3 L
FRUIT CAKE WITH SPONGE-CAKE MIXTURE	-	2	150 - 160	20 - 30	0.2 L
RUNNY MIXTURE IN TIN	-	2	150 - 160	50 - 70	0.4 L
FRUIT CAKE WITH RUNNY MIXTURE	-	2	150 - 160	20 - 30	0.3 L
CUPCAKES WITH RUNNY MIXTURE	-	2	150 - 160	25 - 35	0.3 L
PLAITED BRIOCHE	-	2	150 - 160	35 - 45	0.4 L
BRIOCHE CAKE	-	2	160 - 170	30 - 40	0.4 L
CHOUX PASTRY (ÉCLAIRS/PROFITEROLES)	-	2	200 - 220	25 - 35	0.3 L
PUFF PASTRY DESSERTS	-	2	200 - 220	15 - 25	0.2 L
UNFILLED VOL AU VENTS	-	2	200 - 220	8 - 10	0.2 L
APPLE TART	-	2	190 - 210	35 - 45	0.3 L
FRESH STRUDEL	-	2	170 - 180	50 - 60	0.3 L
FROZEN STRUDEL	-	2	180 - 190	35 - 45	0.3 L
<b>BREAD</b>					
BREAD ROLLS	1	2	40	20 - 25	0.3 L
	2	2	190 - 200	20 - 25	-
FOCACCIA	1	2	40	20 - 30	0.3 L
	2	2	200	25 - 35	-
EMPANADA	1	2	40	20 - 30	0.4 L
	2	2	200	25 - 35	-
BREAD DOUGH 750 - 1000 g	1	2	40	15 - 25	0.3 L
	2	2	220	10 - 15	-
BREAD DOUGH 1000 - 1250 g	1	2	40	20 - 25	0.3 L
	2	2	220	10 - 15	-
BREAD DOUGH 1250 - 1500 g	1	2	40	20 - 25	0.3 L
	2	2	220	10 - 15	-

(\*) corresponds to the position of the grill or tray from the **bottom**.

(\*\*) see instructions in section "11.5.5" page 57.

- The **values indicated in the table** refer to the preparation of food just out of the fridge and placed in a cold, non-preheated oven, unless indicated otherwise.
- In addition to the indications provided, **also remember** at the end of cooking or when checking on your baking, open the oven slightly and wait until all the steam has come out. This prevents quantities of steam escaping all in one go with the risk of scalding.



## 13. Cleaning and maintenance



**Before cleaning or carrying out maintenance, switch off the power supply to the appliance and close the gas tap.**



**Warning: Servicing should be carried out only by authorised personnel. Do not clean the surfaces of the appliance when they are still hot. Use only suitable detergents to clean the surfaces of the appliance. The manufacturer declines all responsibility and is not liable for damage arising from the use of unsuitable and/or other detergents than those indicated. Do not use pressure or steam spray guns to clean the appliance.**


### 13.1 Maintenance Schedule

No regular maintenance is required for the appliances except cleaning.

### 13.2 Cleaning the stainless steel surfaces

To clean and preserve the stainless steel surfaces, use a **solution of warm water and vinegar or neutral soap**. Pour the solution onto a damp cloth and wipe the steel surface, in the direction of the satin finish, rinse thoroughly and dry with a soft cloth or chamois leather.

**Do not under any circumstances use metallic sponges or sharp scrapers that may damage the surfaces.** Only use non-scratch, non-abrasive sponges and, if necessary, wooden or plastic utensils.

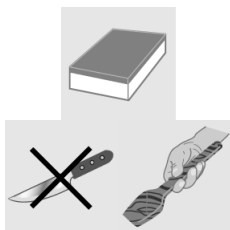

### 13.3 Cleaning the enamelled surfaces

Clean with a non-scratch, **non-abrasive** sponge dampened with **neutral soap and water**. Grease stains can easily be eliminated with **hot water** or a product specifically made for cleaning enamel. Rinse carefully and dry with a soft cloth or a piece of deerskin.

**Do not use products containing abrasives, scouring pads, steel wool or acid, which may spoil the surfaces.** Do not leave acid or alkaline substances on the enamel (lemon juice, vinegar, salt, etc.).



### 13.4 Cleaning the polished surfaces

Clean with a **non-abrasive**, scratchproof sponge dampened with **warm water and neutral soap** or with a standard detergent for polished surfaces. Rinse and dry carefully with a soft cloth.

**Abrasive pastes, coarse wire pads, steel wool or acid will damage the surfaces. Do not use alcohol.**




### 13.5 Cleaning the wooden surfaces, accessories and parts

We recommend using cleaning products normally available on the market. These products ensure the wood is preserved over time. If these products are not available, we recommend removing the dirt as soon as possible using a cloth dampened with **water and neutral soap**. Rinse thoroughly and dry with a soft cloth. Remove the larger incrustations and more stubborn residues using a **scratch-resistant scraper for wood** or a special sponge designed for delicate surfaces.

**Do not under any circumstances use metallic sponges or sharp scrapers that may damage the surfaces.**

**Do not wash wooden accessories and parts in the dishwasher. Keep dry and avoid extreme temperature changes. Excessive humidity and extreme temperature changes may irrevocably deform the wooden accessories and parts.**

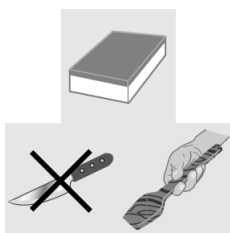

### 13.6 Cleaning the knobs and the control panel

Clean the knobs and the control panel with a damp cloth.



## 13.7 Cleaning the grids and burners


To clean the grids and hob burners, remove them from their housing by lifting them upwards as shown in the figure, and immerse them in a solution of **warm water** and **non-abrasive neutral detergent** for about ten minutes. Rinse and dry carefully.

**Do not wash the burners or the plates in the dishwasher.**

**Always check that none of the burner openings is clogged.**

Be sure to refit the burner correctly, checking the flame is uniform.


We recommend carrying out this operation at least once a week and each time it is necessary.

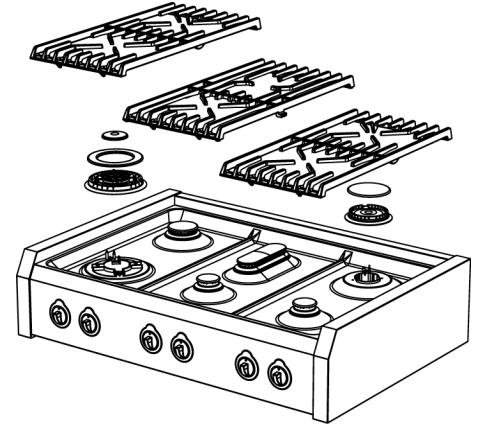

## 13.8 Cleaning the igniter plugs and thermocouples

In order for the igniter plugs and thermocouples to operate correctly, they must be kept clean at all times. Check them frequently and, if necessary, clean them with a damp cloth. Dry thoroughly.

Any dry residue should be removed with a toothpick or needle, **taking care not to damage the insulating ceramic part.**

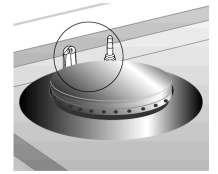


## 13.9 Cleaning the fry-top / steak grill

Any grease deposits on the fry-top/steak grill can be eliminated more easily when the griddle is still warm. If necessary, leave it to cool and soak for a few minutes. Finally, clean with warm salted water, dry with a tea cloth or kitchen roll.

After each use, the vitroceramic surface **V** underneath the fry-top/steak grill should also be cleaned. Any residue of meat or grease can be removed by proceeding as follows:

- remove the fry-top/steak grill from its housing;
- turn the knob to position **11**;
- after approximately **20-30 minutes**, even the toughest residue can easily be cleaned off the vitroceramic surface with a wooden spatula;
- switch off the heating and leave to cool, then clean the vitroceramic surface **V** with specific products;
- dry thoroughly and return the fry-top/steak grill to its working position.

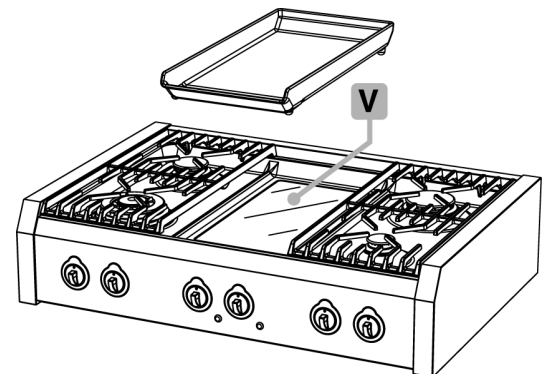



### 13.10 Cleaning the volcanic rock grill



*After cooking, the cast iron grill and other components will remain hot for a certain length of time. Make sure they are completely cool before handling them for cleaning.*

Proceed as follows:

- clean the cast iron grill by immersing it in hot water and washing up liquid. Do not under any circumstances use **abrasive or corrosive** detergents (e.g. **powder products or metallic sponges**). Rinse and dry carefully.




*While cleaning the grill, **handle it with care** as it is fragile due to the material it is made of and its thickness.*



*Any grease deposits can be removed more easily by heating the grill for **5 or 10 minutes** (knob in position **11**). Allow the grill to cool, remove it, rinse and dry well with a clean cloth.*

- Lift the heating element upwards and clean it with a damp sponge;
- lock the heating element by moving the lock system **S** towards the left as shown in the figure.
- Remove the safety vat. Place the volcanic rock in a suitable container or pour away the water with the cooking fat residue.

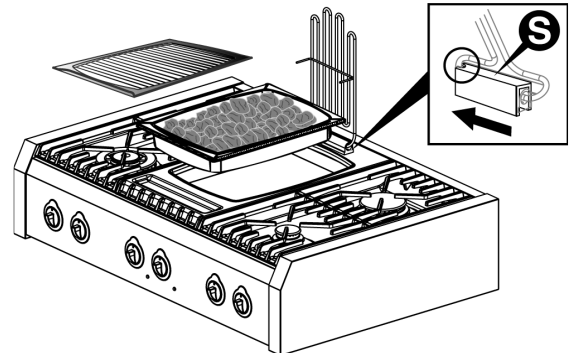

*The volcanic rock contained in the collection basin is not subject to wear and therefore never has to be replaced. To eliminate any unpleasant odours due to normal use, stir up the stones and heat them for a few minutes. If cooking grease is deposited on the surface of the stones, it is sufficient to heat them in an oven for high temperature pyrolysis. The same quality of cleaning can be obtained by turning the energy regulator knob of the grill to the maximum position (**11**) for **5 or 10 minutes**, depending on the amount of soil that has accumulated. In any case, volcanic rock replacements can be found in any store that sells household goods.*

- The stainless steel safety vat should be cleaned with a specific product that **does not contain chlorine-based abrasives or acid substances**, or a little warm vinegar (it is dishwasher safe). Rinse and dry carefully;
- replace the safety vat into its working position. Finally, release the lock system **S** and lower the heating element over the vat.



## 13.11 Cleaning the vitroceramic hob


The vitroceramic hob must be cleaned regularly, each time it is used if possible, when the latent heat lights are off.

Any light-coloured marks caused by aluminium-based pans can be removed with a damp cloth dipped in vinegar.

Any burnt residue left after cooking can be removed with a wooden spatula. Rinse with water and dry well with a clean cloth.

Do not under any circumstances use **abrasive or corrosive** detergents (e.g. powder products, oven sprays, stain-removers or metallic sponges).

Any grease deposits on the vitroceramic hob can be removed more easily by heating it for approximately **20-30 minutes** (knob in position 11). Afterwards, this residue can be cleaned off with a wooden spatula. Allow the surface to cool, rinse with water and dry well with a clean cloth.

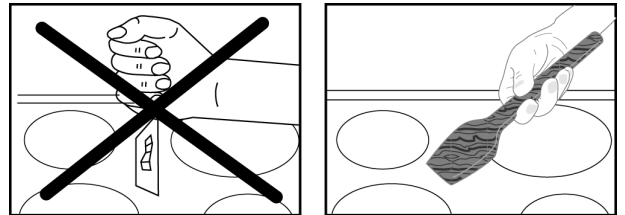

In the event that aluminium or plastic marks, sugar or food containing sugar melt on the cooking surface, **remove immediately** while the surface is still warm with a wooden spatula. This will prevent any damage to the surface.



*The cooking surface of the vitroceramic hob is extremely resistant. It is not however unbreakable and may be damaged, above all by pointed or hard objects if dropped onto it with a certain force. **Warning! If any crack should appear on the hob, isolate the cooker from the main supply and do not use the appliance to avoid electrocution. Call Customer Services immediately.***

## 13.12 Cleaning the induction hob

The induction hob requires no special maintenance or cleaning. If burned-on food residues remain near the cooking zone after cooking, remove them using a scratch-resistant scraper, rinse with water and dry well with a dry cloth. Regular use of the scraper avoids the use of chemical cleaning products.

Before moving or sliding pans onto the hob, ensure that there are no crumbs or impurities that may cause scratches.

Do not use abrasive sponges or detergents. Avoid using aggressive chemical products, such as oven cleaning sprays, stain-proof products or other products such as bathroom or all-purpose cleaners.




*Take care that the hot glass ceramic hob does not come into contact with plastic, aluminium foil, sugar or food containing sugar. These substances can damage the surface of the hob and should be removed immediately using a scratch-resistant scraper.*

*Before cooking sugary foods, it is advisable to treat the glass ceramic surface with a specific silicone-based product to protect the hob surface from any burned-on food residue.*



To clean the surface of the glass ceramic hob, proceed as follows:

1. Remove the larger incrustations and more stubborn residues using a scratch-resistant scraper or a special sponge designed for delicate surfaces.
2. Wait for the hob surface to cool down completely, pour a few drops of detergent and rub with kitchen roll or a clean cloth. Alternatively, use a special sponge designed for delicate surfaces.
3. Wipe over the hob surface with a damp cloth, or with the dry side of a special sponge.

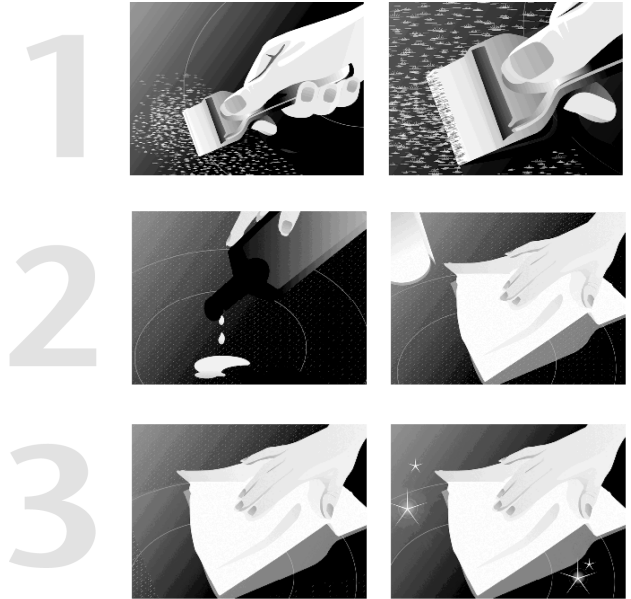

### 13.13 Cleaning the oven

In order to preserve the oven well, it should be cleaned regularly, each time it is used if possible, **after leaving it to cool**: in this way it is possible to remove any residue more easily, preventing it from burning the next time the oven is used.

Clean the stainless steel parts and enamelled parts as described in the corresponding sections "13.2 Cleaning the stainless steel surfaces" and "13.3 Cleaning the enamelled surfaces".

Take out all the removable parts and wash them separately. Rinse and dry thoroughly with a clean cloth.

#### 13.13.1 Cleaning the oven walls

**Never use detergent products to clean this type of oven.**

The walls of the oven can be cleaned using white vinegar and wiped with a cloth dampened with water. Subsequently, heat the oven for at least one hour at **150°C** to facilitate cleaning. When the oven has cooled, wipe it again with a damp cloth.

#### 13.13.2 Cleaning the oven door

We recommend always keeping the oven door clean. Use kitchen roll and on tougher dirt use a damp cloth and household detergent.



***Spray products for cleaning the oven must not be used to clean the fan and the thermostat sensor inside the oven compartment.***





## 14. Special maintenance

Periodically, it is necessary to maintain or replace some parts that are subject to wear and tear. Specific instructions are given below for each type of maintenance.



**Before carrying out maintenance, switch off the power supply to the appliance and close the gas tap.**

### 14.1 Removing the oven door


The oven door can be completely removed to enable more thorough cleaning.



*Though this operation is possible, it should not be performed by everyone, as it requires the strength to hold up the door and a minimum of expertise to re-fit it. If you are not sure of being able to do this, we recommend that you clean the door without taking it off or, in special cases, that you contact the nearest authorised service centre.*

To remove the door, proceed as follows:


- open the oven door and release the safety catches of the hinges by turning the respective pins **A** (one for each hinge) backward;
- partially close the door until there is no more load tension on the springs (the door will form an angle of about 30°);
- **using both hands**, accompany the movement of the door towards closure and simultaneously lift it upward;
- turn the lower part of the door towards the outside to free the hinges **B** from their seats.

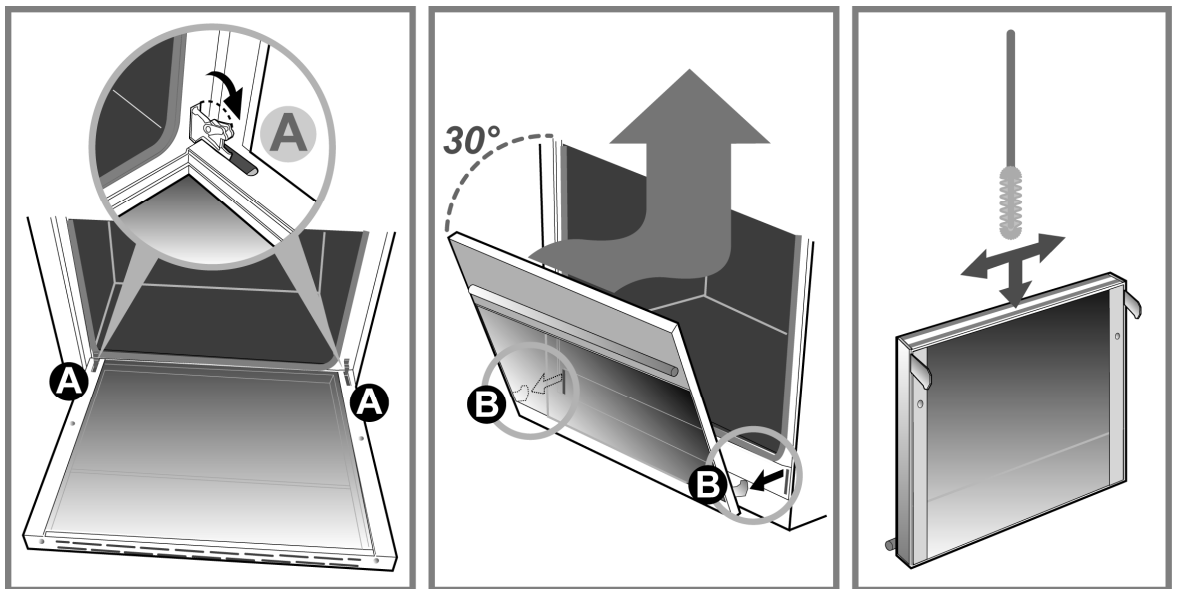

The **inner glass** can be removed for more thorough cleaning.

Proceed as follows:

- loosen screw **C** by **half a turn** to enable the catch to be lifted from right to left;
- lift the two catches and slide out the inner glass;
- to refit the glass, follow the above instructions in reverse order.

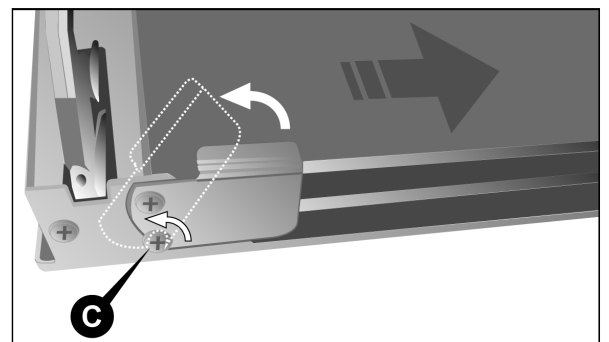




To clean the area between the outer glass and the intermediate glass, use a **soft brush** in the space between the glass panels, as shown on p. 73.

To **refit** the door, follow the instructions on p. 73 in reverse order.

When the hinges **B** are back in their seats, open the door all the way and re-fit the safety catches of the hinges, lowering the respective pins **A** (one for each hinge).



**CAUTION:** After re-fitting the door, **always be sure to re-fit the hinge safety catches**.

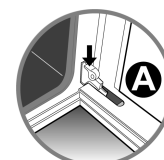


## 14.2 Removing the side rack-holder frames

The rack-holder frames can be removed to clean them separately and to facilitate cleaning the oven walls. The frames are hooked to the oven wall in the three points indicated by the arrows in the figure (detail 1).

- Press downward with your fingers as shown in detail 2 of the figure to release the frame from the upper pin.
- Lift the frame upward and take it out.

To re-fit proceed in the inverse direction. Set the lower part of the frame on the respective pins and press the upper part against the oven wall until it hooks onto the pin.

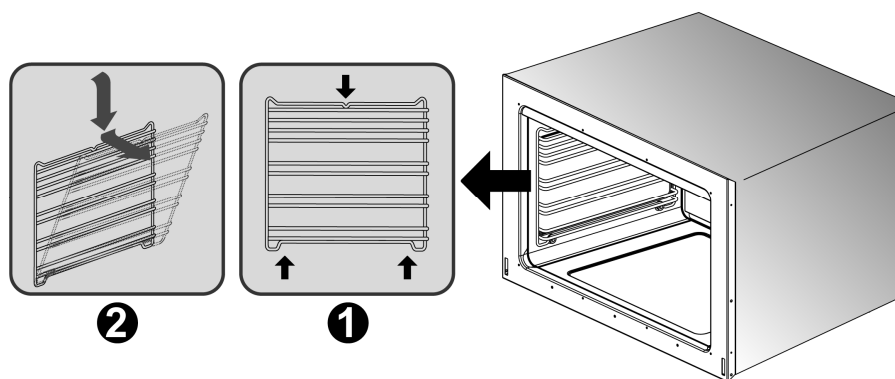




## 14.3 Removing and cleaning the inside oven fan

The inside fan of the ventilated oven may require periodic cleaning. To disassemble the fan proceed as follows:

- **Make sure that the power supply to the appliance is switched off.**
- Remove all inside components (racks and dripping pans).
- Loosen and remove the four screws **A** from the cover panel.
- Remove the cover panel **B**.
- Use a coin to loosen the fixing nut **C** of the fan (this threading is inverse; to loosen turn **clockwise**).
- Remove the fan **D** and wash it by immersing it in warm water and dish detergent. **Never use abrasive or corrosive detergents, powdered products, or metal scrubbers.** Rinse the fan and dry it thoroughly.

Re-fit the fan and the cover by working in the inverse direction to the instructions for removal.

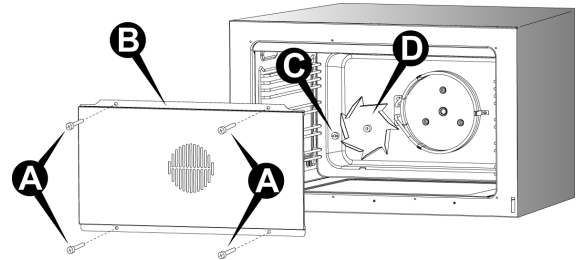

## 14.4 Replacing the oven's light bulb




**Before carrying out maintenance, switch off the power supply to the appliance.**

Proceed as follows:

- open the oven door;
- unscrew the glass safety cap anticlockwise;
- unscrew the bulb and replace it with another one for **high temperatures (300°C)** with the following characteristics:

<b>Voltage</b>	230 V1N~ / 50 Hz
<b>Power</b>	25 W (halogen bulb)
<b>Attachment</b>	G9

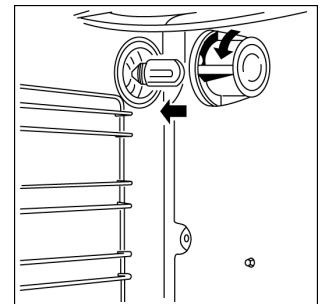

- Refit the glass cap and switch on the power. It is possible to check that the oven light is working even when the door is closed by turning the function switch knob to position



### 14.5 Cleaning the water tank


To clean the water tank, the cover must be removed.

Proceed as follows:

- remove all objects and components inside the oven (racks and dripping pans);
- using a coin or a flat-head screwdriver, unscrew and remove nut **A** fastening the cover (detail 1);
- take hold of nut **B** and pull it towards you (arrow **a**) to free the slot in the cover from the rear pin (detail 2);
- still holding the nut **B**, push slightly back and lift (arrows **b**, **c**) and completely remove the cover **C** from the front guide **D** (detail 3).

Clean the cover and the water tank following the instructions given in section “13.2 Cleaning the stainless steel surfaces”.

To reposition and secure the cover, follow the above instructions in reverse order.

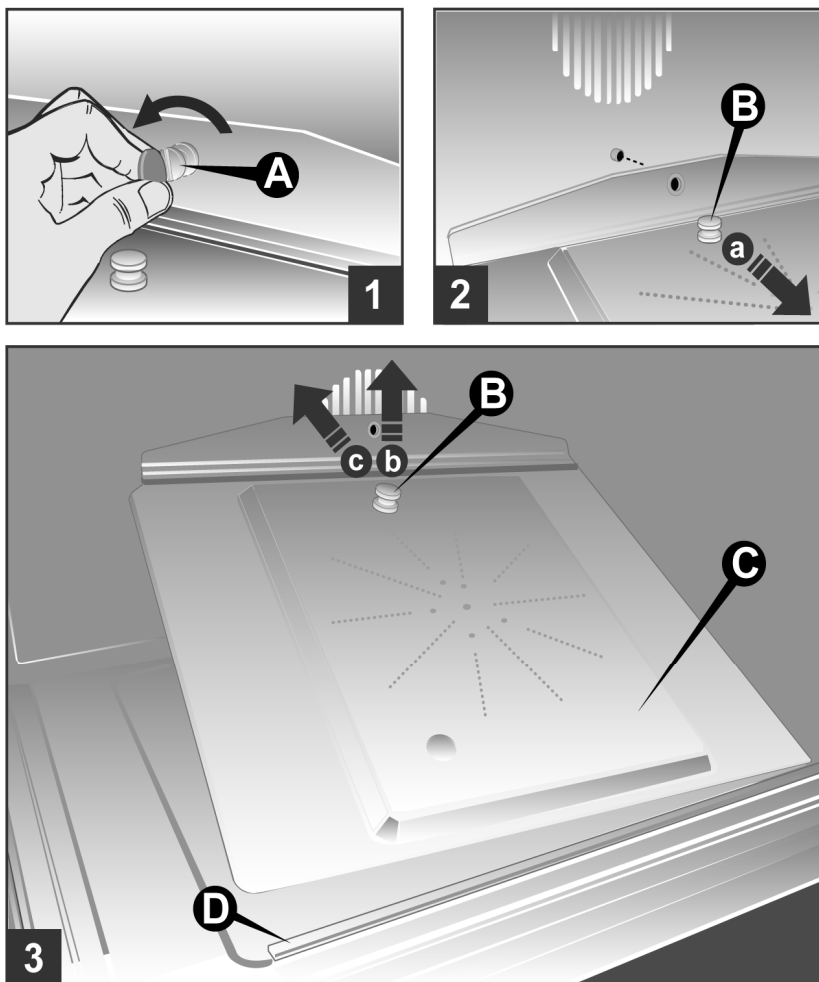

*Any lime scale can be removed using vinegar; avoid using chemical substances to prevent possible food contamination.*

---

---

---

---

---

---

---

---

---


---

---

---





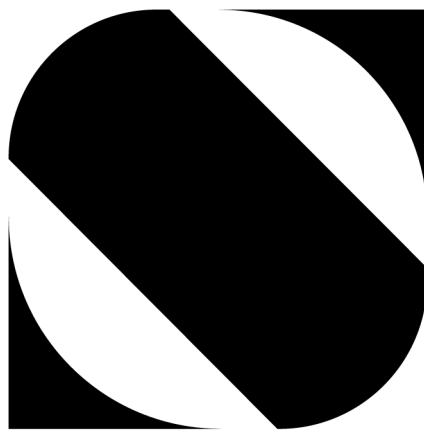

[www.steel-cucine.com](http://www.steel-cucine.com)

**STEEL SRL**

Via dell'Agricoltura 21  
41012 Carpi (MO) - Italy  
T. +39 059 645180  
F. +39 059 6220804  
P. Iva 02593690361